



AVS3000 ALARM/IMMOBILISER

INTRODUCTION

Thank you for choosing the AVS 3000 for your vehicle. These systems have been designed to provide exceptional security and convenience for you and your vehicle.

When armed the AVS 3000 protects your vehicle by triggering if the door, bonnet and boot is opened or if an impact is detected by the on-board shock sensor. The AVS 3000 immobilises one of the vehicles electrical circuits, usually starter or ignition when the alarm is armed.

NORMAL OPERATION

THE REMOTE CONTROL:

The remote controls are used to control the alarm's various functions and features. The AVS 3000 is supplied with two remotes both with two buttons.

The remotes have two long life lithium batteries fitted which can be purchased from your AVS dealer or any good electrical outlet.

It is wise to replace the batteries before they fail completely. An indication that the battery needs replacing would be a reduction in operating range.

ARMING THE ALARM:

When the alarm is in a disarmed state (LED not flashing) push button one to arm the alarm. The siren will chirp and flash indicators once.

The LED light will turn on solid for ten seconds then start flashing. If a door, bonnet or boot is opened or if the shock sensor detects an impact to the vehicle the alarm will sound.

ERROR REPORT:

If any of the doors are open when you arm the alarm, the system will warn you by chirping after 4 seconds.

DISARMING THE ALARM:

When alarm is armed (LED flashing), push button one to disarm. The alarm will chirp twice and flash indicators twice.

AUTO ARM:

The AVS3000 has the ability to automatically arm 30 seconds after the ignition is switched off and the last door is closed. See your installer if you would like this option turned on. THIS FEATURE CANNOT LOCK THE DOORS

AUTO RE-ARM:

The AVS 3000 will automatically re-arm itself and re-lock the doors if the system is disarmed and a door not opened within 60 seconds. This function prevents the accidental disarming of the alarm system.

SHOCK SENSOR:

The shock sensor is designed to detect impacts to the vehicle. If the shock sensor detects an impact the alarm will trigger.

EMERGENCY OVER-RIDE:

In the event that you lose or damage your remote controls the alarm can be disarmed by via the ignition switch.

Emergency Over-ride Procedure:

1. Open the door the alarm will trigger and the siren will sound.
2. Enter the car and close the door.
3. Turn ignition from ACC to OFF 10 times and leave in the OFF position.
4. Wait 5 seconds, if the code is correct the siren will stop and the alarm will enter disarmed mode. If the alarm does not stop, the code was entered incorrectly. Start again from 1.

ADDITIONAL FEATURES

The AVS 3000 has several additional features. Some vehicles may require extra components. Please consult your installer.

CENTRAL LOCKING:

Doors will lock when alarm is armed and un-lock when disarmed.

PANIC FUNCTION:

When in armed mode press button one for 2 seconds. The alarm will trigger for 30 seconds.

TRUNK RELEASE:

Push button two for 2 seconds. The indicators will flash 10 times and the trunk catch will release. Most vehicles will require additional components for boot release.

CAR FINDER:

Push button two once. The indicators will flash 10 times helping you to locate your car at night or in a crowded car park.

AVS
advanced vehicle security