

Before Use and Preparations

Notes for the touch panel

When operating

- You must use your fingers to touch the panel and perform operations.
- Do not press the buttons too forcefully. If you do so, you may damage or break the glass on the top surface of the touch panel.
- Do not allow the top surface of the touch panel to be caught by your fingernails or any hard objects. If you do so, you may damage or break the glass on the top surface of the touch panel.
- Do not use a pen or other sharp implement to perform touch panel operations. If you do so, you may damage or break the glass on the top surface of the touch panel.
- Performing operations while the top surface of the touch panel is covered with dust may damage the glass on the top surface of the touch panel.

When not operating

- Be sure to keep the front panel with the removable face plate case (included) when it has been detached from the main unit.
- Take care not to drop the front panel when it has been detached from the main unit. Also take care not to bump the top surface of the touch panel into anything. If you do so, you may break the glass on the top surface of the touch panel.
- Do not allow the top surface of the touch panel to be caught by your fingernails or any hard objects. If you do so, you may damage or break the glass on the top surface of the touch panel.

When cleaning (⇒ page 46)

Name of Controls Functions (Remote Control Unit)

Point the remote control unit at the main unit's sensor. (⇒ page 18)

[PWR] (SOURCE)

- Switches on/off the power. (⇒ page 20)
- Selects a source. (⇒ page 20)

[BAND]

- Selects a band. (⇒ page 22)
- Pause CD playing. (⇒ page 25)

[RET] (RETURN)

- Returns to the previous display in menu setting mode.

[MENU]

- Enters the menu setting mode.
- Returns to the regular mode during menu play setting.

[FACE]

- Selects the button color and display brightness. (⇒ page 33)

[S·A] (Spectrum Analyzer)

- Selects the Spectrum Analyzer display pattern. (⇒ page 37)

[DISP] (Display)

- Changes the display. (⇒ pages 22, 25, 29)

[DIM] (DIMMER)

- Changes the dimmer level. (⇒ page 37)

[#] (NUMBER)

- Enters the number input mode. (⇒ pages 25, 29)

[0] to [9]

- Memorizes broadcast stations. (⇒ page 23)
- Selects track/disc. (⇒ page 25, 29)

[4] (RANDOM)/[5] (SCAN)/[6] (REPEAT)

- Selects listening item. (⇒ pages 26, 30)

["] [#] (Hour/minute/disc)

- Selects (vertically) or adjusts an operation or item.
- Adjusts the clock. (⇒ page 21)
- Selects disc. (⇒ page 28)

[%] [\$] (Track/tune)

- Selects (horizontally) or adjusts an operation or item.
- Selects or searches frequency/track. (⇒ pages 22, 25, 28)

[SET]

- Determines an operation or item.

["] [#] VOL (Volume)

 
- Adjusts the sound volume. (⇒ page 21)

[MUTE]

- Lowers the volume. (⇒ page 21)

[S] (S-HDB)

- Sets the Super High Definition Bass sound. (⇒ page 33)

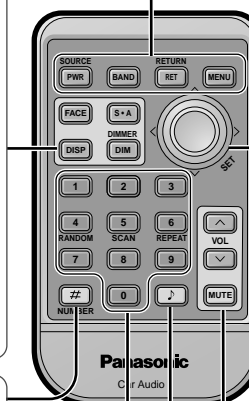

Battery Installation

1 Remove the battery holder.


Pull the **battery holder** by the **position B** while pushing **position A** in the direction indicated by the arrow.

2 Install the battery on the battery holder.

As shown in the figure on the right, fit the battery into the battery holder with the "+" side facing up while pressing on position A.

3 Insert the battery holder.

Push the **battery holder** back into its original position.

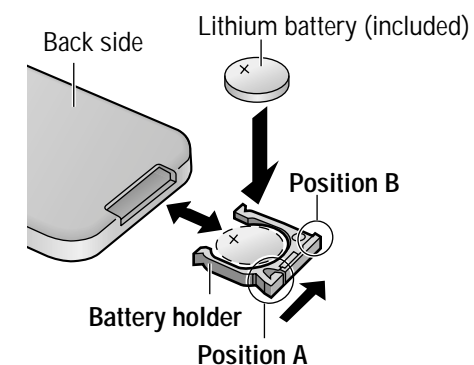

Battery Notes

Remove and dispose of an old battery immediately.

 
Battery Information: • Battery type: Panasonic lithium battery (CR2025) (included)

- Battery life: Approximately 6 months with normal use (at room temperature)

Caution: Improper use of batteries may cause overheating, an explosion or ignition, resulting in injury or a fire. Battery leakage may damage the unit.

- Do not disassemble or short the battery. Do not throw a battery into a fire.
- Keep batteries away from children to avoid the risk of accidents.
- Be careful to observe proper local disposal rules when you dispose of batteries.

Name of Controls Functions (Main Unit and Touch Panel)

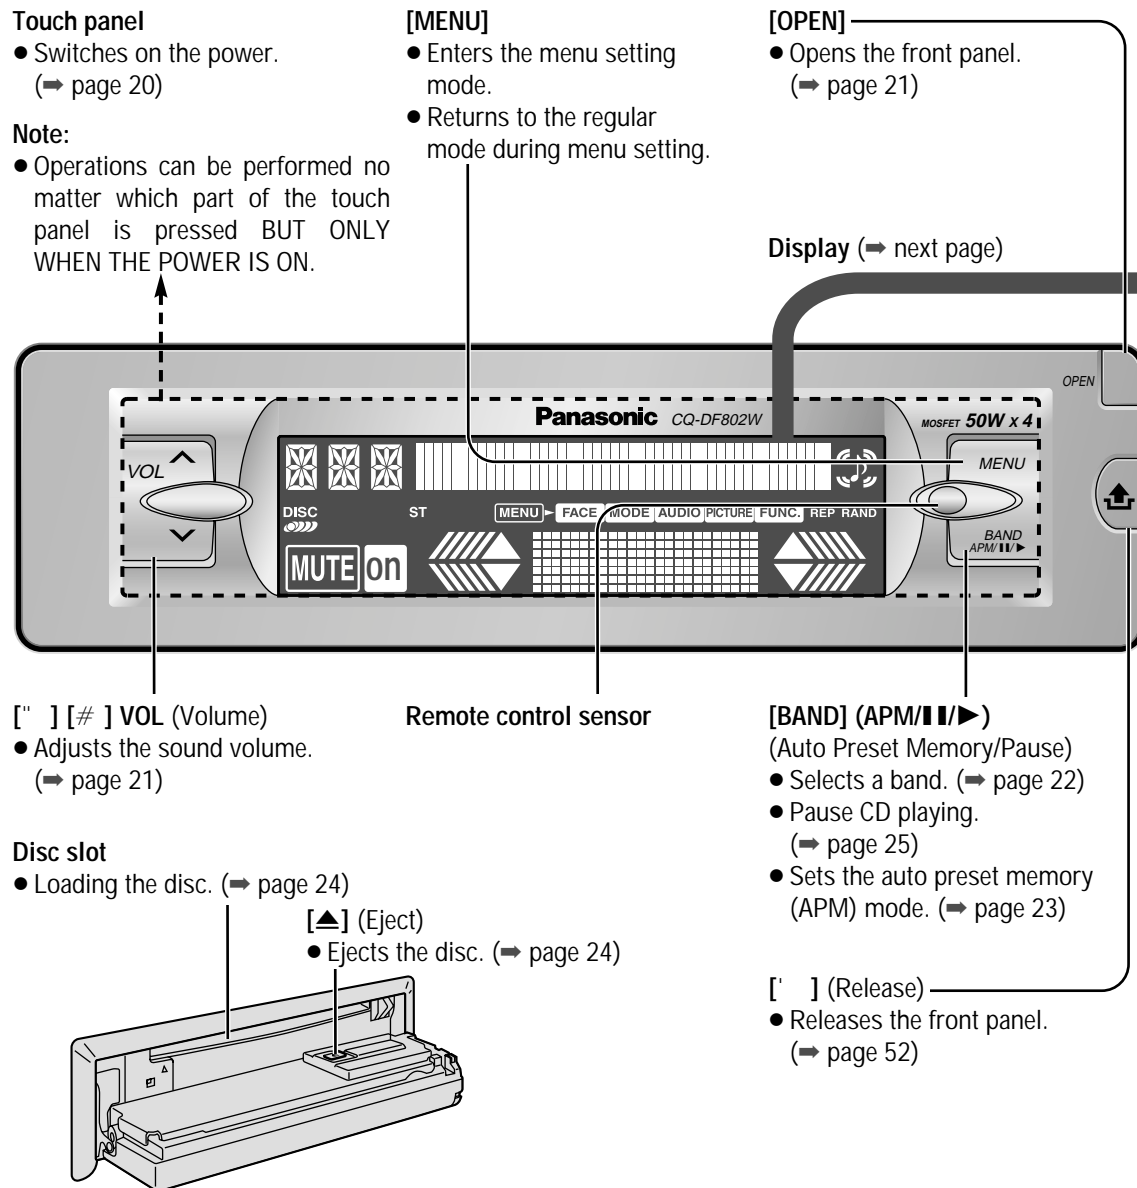

※ The brightness of the screen illustrations in this manual is different from the actual screen brightness.

☐ You can operate this unit by pressing buttons on the main unit and the remote control unit, and touch panels on the main unit.

• Some operations can be activated by pressing buttons only on main unit or remote control unit. Those cases are described in the instructions.

 
Example: Press [OPEN] on the main unit.

• These instructions describe buttons that are concerned with operations as follows.

Example: Press [VOL "] or [VOL #]/["] or [#].

[buttons on the main unit]/[remote control unit]

(Display)

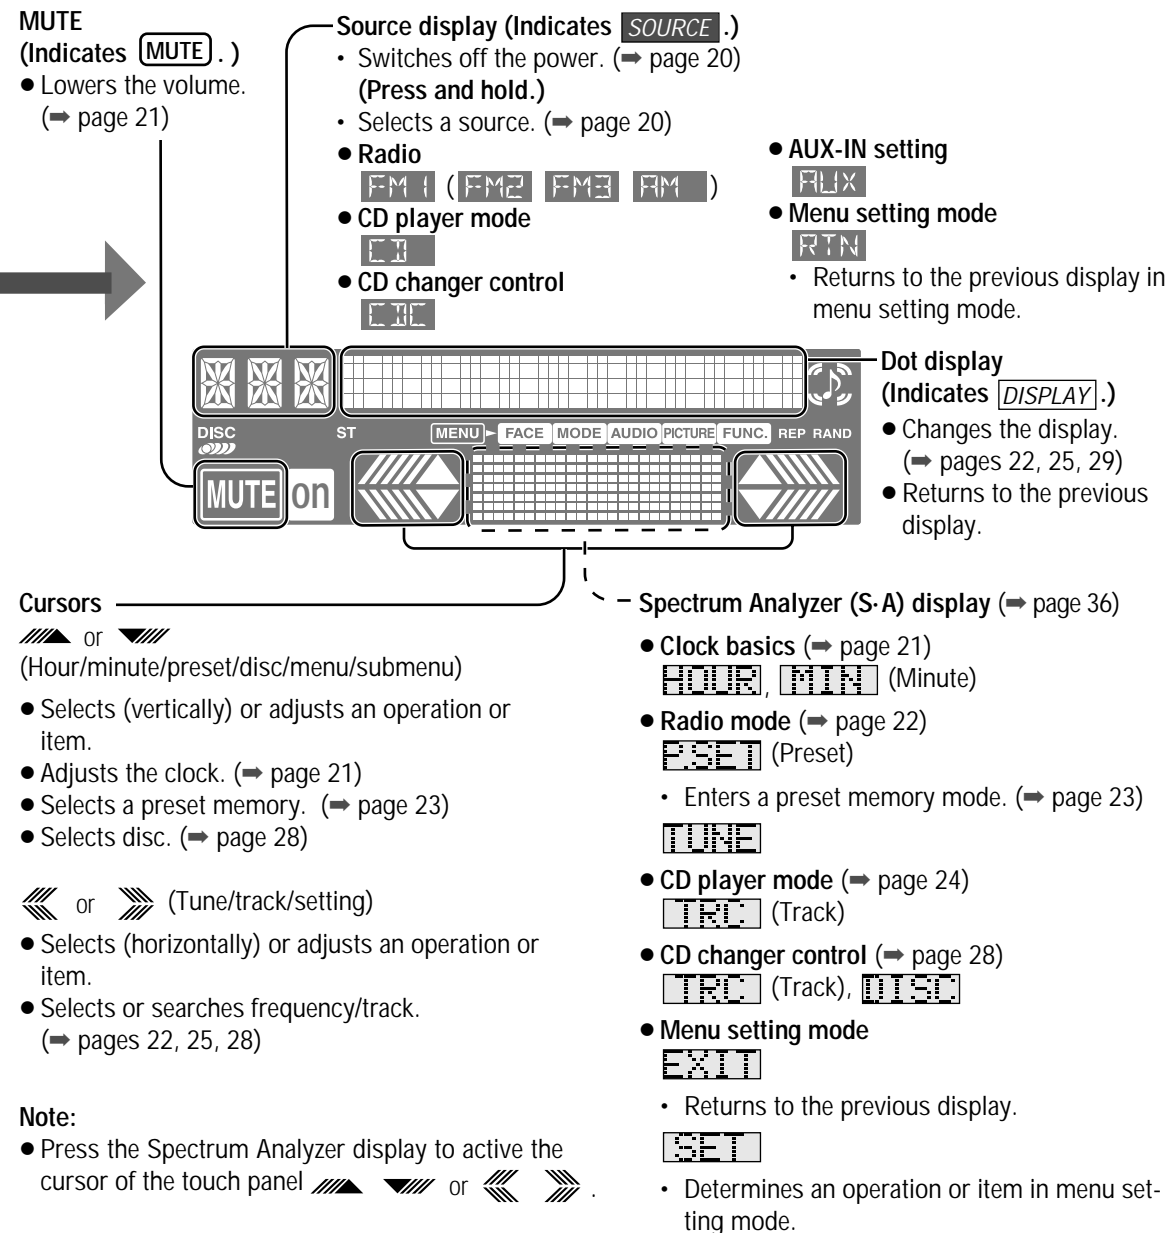

Example: Press ▲ or ▼ / ["] or [#].

cursor on the touch panel / [remote control unit] (⇒ above.)

Example: Press [EXIT] / [MENU] / [DISP].

Spectrum Analyzer display on the touch panel / [buttons on main unit] / [remote control unit] (⇒ above.)

General

1 Power

Turn the key in the ignition until the accessory indicator lights.

■ Power on

 
 
 
Press the touch panel on the main unit.
Press **[PWR] (SOURCE)** on the remote control unit.

■ Power off

Press and hold **[SOURCE]** on the main unit again for more than 1 second.
Press and hold **[PWR] (SOURCE)** on the remote control unit again for more than 1 second.



Note:

- After turning off the ignition key, a security message is displayed, and the panel removable alarm that reminds you to take the panel is activated. (When security function is set to on → page 38)
- Operations can be performed no matter which part of the touch panel is pressed BUT ONLY WHEN THE POWER IS ON.

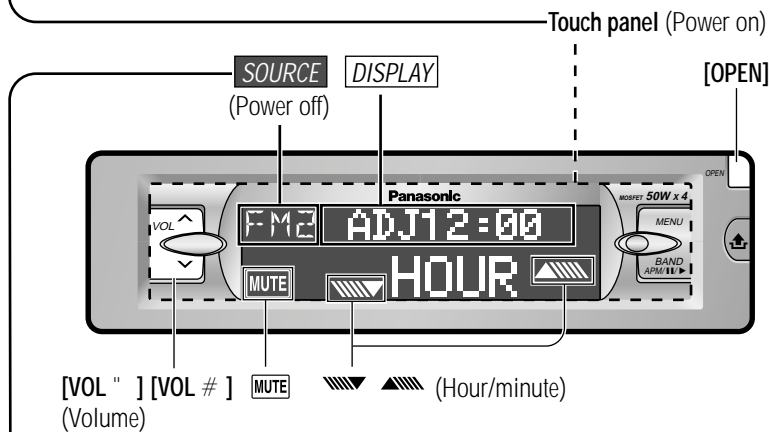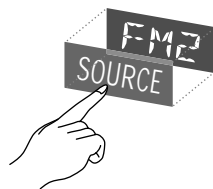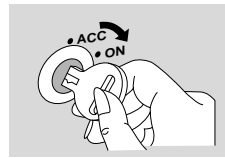

2 Source

  Press **[SOURCE] (SOURCE)** to change the source.

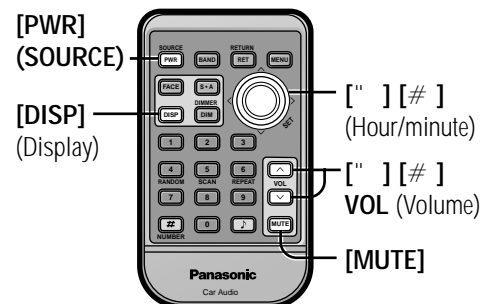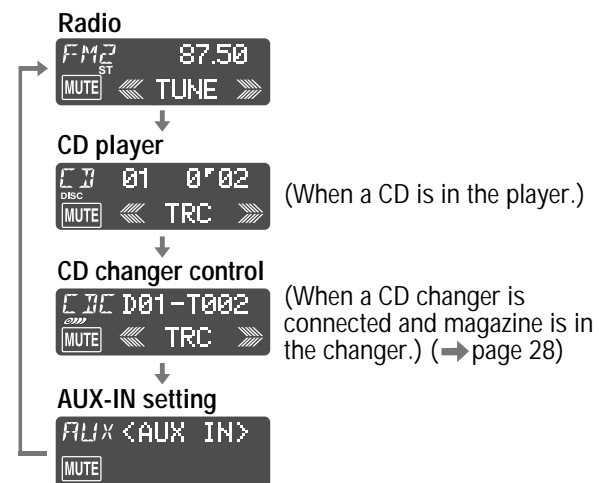

Volume

[VOL "]: Up
[VOL #]: Down



 
Note:

- The sound level for each source is stored in memory. (There is one volume setting for AM radio band, and one volume setting for FM radio band.)

Mute/Attenuation

ON: Press **[MUTE] / [MUTE]**. (**ON** indicator lights.)


OFF: Press **[MUTE] / [MUTE]** again.



Decreasing volume range depends on setting. (→ page 38)

Open/Close the Front Panel

 OPEN: Press **[OPEN]** on the front panel.
CLOSE: Raise the panel by hand.

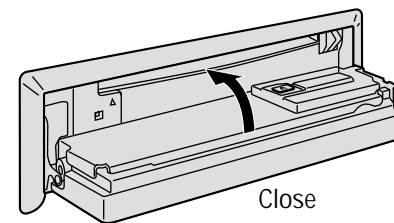

Caution:

- To avoid damaging the front panel, do not push it down or place objects on it while it is open.
- Do not pitch your finger or hand in the front panel.
- Do not insert foreign matter into the disc slot.

Clock Basics

The 12-hour system is used for the clock.

Initial Time

① Press **[DISPLAY] / [DISP] (display)**.



② Press and hold **[DISPLAY] / [DISP] (display)** for more than 2 seconds.



③ Press **[▲] or [▼] / [] or [#]**.



④ Press **[DISPLAY] / [DISP] (display)**.



⑤ Press **[▲] or [▼] / [] or [#]**.



⑥ Press **[DISPLAY] / [DISP] (display)**.

 


Note:

- Press and hold **[▲] or [▼] / [] or [#]** to change numbers rapidly.
- You can select the clock display during the unit off. (→ page 38)

Time Reset


Press and hold **[DISPLAY] / [DISP] (display)** for more than 2 seconds to activate the time setting mode to reset the time. Then, repeat steps ③ to ⑥.

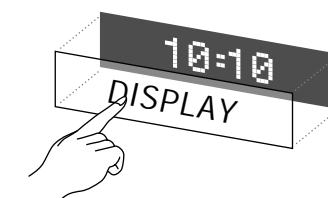

Radio

1 Radio Mode

 Press **[SOURCE]** / **[SOURCE]** to change to the radio mode.


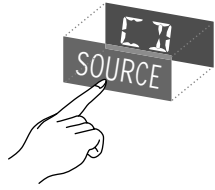


Caution:

- To ensure safety, never attempt to preset stations while you are driving.


2 Band

  Press **[BAND]** to change the band.

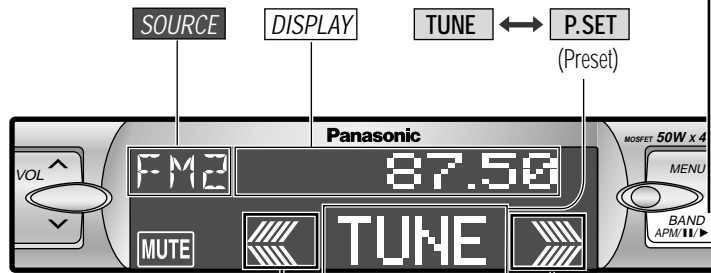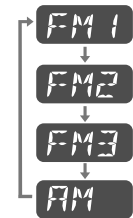

Radio mode display

 FM stereo indicator

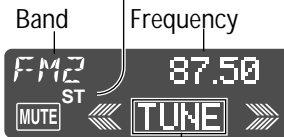

- Press **[TUNE]** or **[P.SET]** to change the cursor.

Note:

 
- **[EMPTY]** : Displays when not have any menu settings. Radio and AUX-IN mode do not have any menu settings.

3 Tuning

[>>] / **[\$]**: Up



[<<] / **[%]**: Down

Press and hold **[<<]** or **[>>]** / **[%]** or **[\$]** for more than 0.5 seconds, then release. Seeking will start.

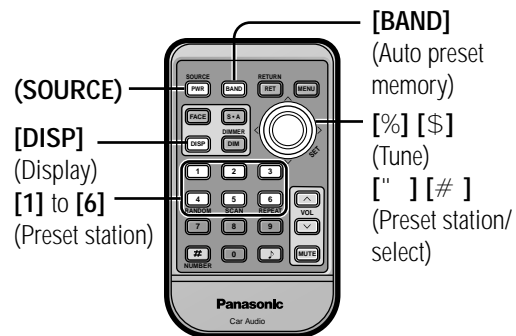

Display Change

  Press **[DISPLAY]** / **[DISP]** (display) to change the display.

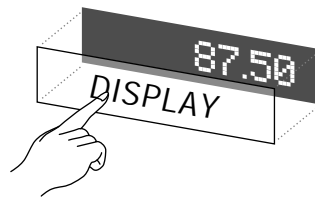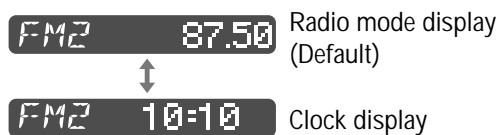

One-Touch Selection of a Station

Up to 6 stations each can be saved in the FM1, FM2, FM3 and AM preset station memories.

Manual Preset Memory

Manually save a station in the preset memory.

- ① Select a band and frequency (steps ①, ② and ③ on the previous page).
- ② Press and hold the Spectrum Analyzer display **[TUNE]** for more than 2 seconds until the preset number blinks.
- ③ Press **[>>]** or **[<<]** / **["]** or **[#]** to select a preset number (1–6).
- ④ Press and hold **[P.SET]** (preset) for more than 2 seconds to memorize.
 - The display blinks once, and a receiving station is saved in the memory.



Note:

- Frequency setting can be performed even after selecting a preset number.

Entering numbers directly on the remote control unit

- ① Select a band and frequency (step ①, ② and ③ on the previous page).
- ② Press and hold **[1]** to **[6]** for more than 2 seconds to memorize.

Auto Preset Memory (APM)

Automatically save relatively strong stations in the preset memory.

- ① Select a band (steps ① and ② on the previous page).
- ② Press and hold **[BAND]** (APM) for more than 2 seconds.



- The 6 strongest available stations will be automatically saved in the memory under preset number 1 to 6.
- Once set, the preset stations are sequentially scanned for 5 seconds each. (Scanning)
- Press **[>>]** or **[<<]** / **["]** or **[#]** for the broadcast you want to listen to. (Press **[1]** to **[6]** on the remote control unit.)

Note:

- Existing saved stations are overwritten with new stations after following this procedure.

 
Preset Station Calling

- ① Select a band (steps ① and ② on the previous page).
- ② Press the Spectrum Analyzer display **[TUNE]** to show **[P.SET]** (preset).
- ③ Press **[>>]** or **[<<]** / **["]** or **[#]** to select the preset number for tuning in the preset station. (Press **[1]** to **[6]** on the remote control unit.)

CD Player

Disc Insert and Playback

- 1 Open the front panel.**
Press [OPEN] on the front panel.

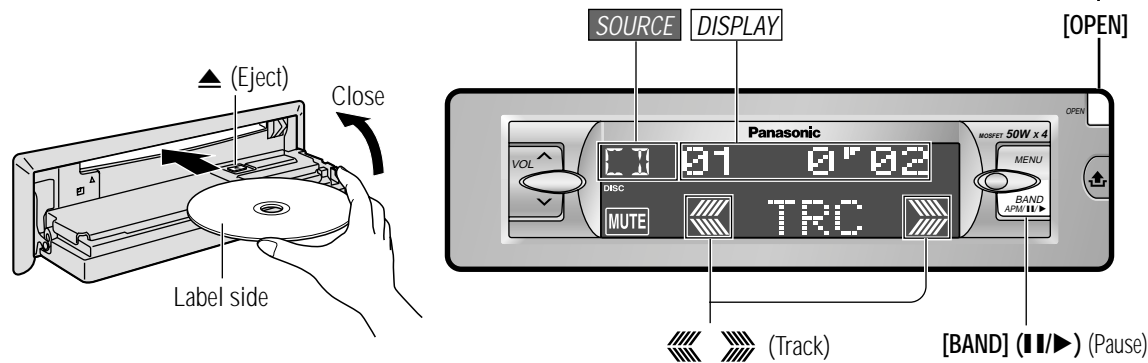

- 2 Insert the disc.**
Playback will start automatically after the unit recognized the loaded disc as an ordinary music CD. (When a CD-R or CD-RW which has CD-DA formatted data as the same as an ordinary music CD is loaded, this unit recognizes it as an ordinary music CD.)
Close the front panel manually.

Note:

 
 
- Loading a disc when the power is off allows the power to be turned on.

Stop and Disc Eject

- Press [OPEN] on the front panel.
- Press [▲] (eject) to stop CD play and eject the disc.

Note:

- Ejecting the disc when the unit is in the CD player mode allows the power to be turned off.

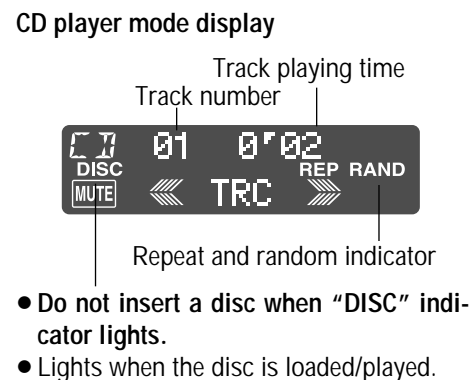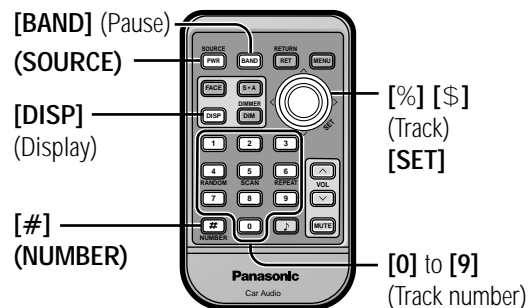

Caution:

 
- Only 12 cm CD, CD-DA data recorded CD-R and CD-RW discs are available for this unit.
- This unit does not support CD text display.
- This unit does not support MP3 disc playback.
- Refer to page 47 about notes on CD-Rs/RWs.
- To avoid damaging the front panel, do not push it down or place objects on it while it is open.
- Do not use irregular shaped discs.
- Do not use discs that have a seal or label attached.
- Do not insert foreign matter into the disc slot.
- The back side of the front panel becomes hot during use, but this is not an indication of any problem. Do not touch anything here except [▲] (eject).
- The disc insertion slot and its vicinity become hot, but this is not an indication of any problem. Be careful when inserting a disc or pressing [▲] (eject).

Listening to a CD

CD Player Mode

(When a CD is in the player.)

Press [SOURCE]/[SOURCE] to change to CD player mode.
Playback starts automatically.

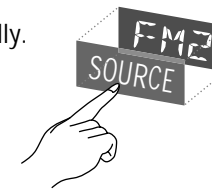

Track Selection

- [/[\$]: Advance to the next track.
- [/[%]: Back to the beginning of the current track. Back to the previous track. (Press twice.)

Track Search

- Press and hold.
- [/[\$]: Fast forward
- [/[%]: Fast backward
- Release to resume the regular play.

Pause

Press [BAND] (|||▶).
Press [BAND] (|||▶) again to cancel.



Direct Track Selection

Only for the remote control unit

Example: track number 10

- Press [#] (NUMBER).



- Press [1] [0].



- Press [SET] to set.



 
The corresponding track starts playing.

Note:

- Press [DISPLAY]/[DISP] (display) or [#] (NUMBER) to return to the regular mode.
- If a non-existent track number is input and entered, the command is invalid and the display returns to regular mode.


Display Change

Press [DISPLAY]/[DISP] (display) to change the display.

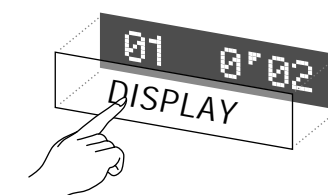


CD Player (Continued)

 Menu Setting on CD Player Mode

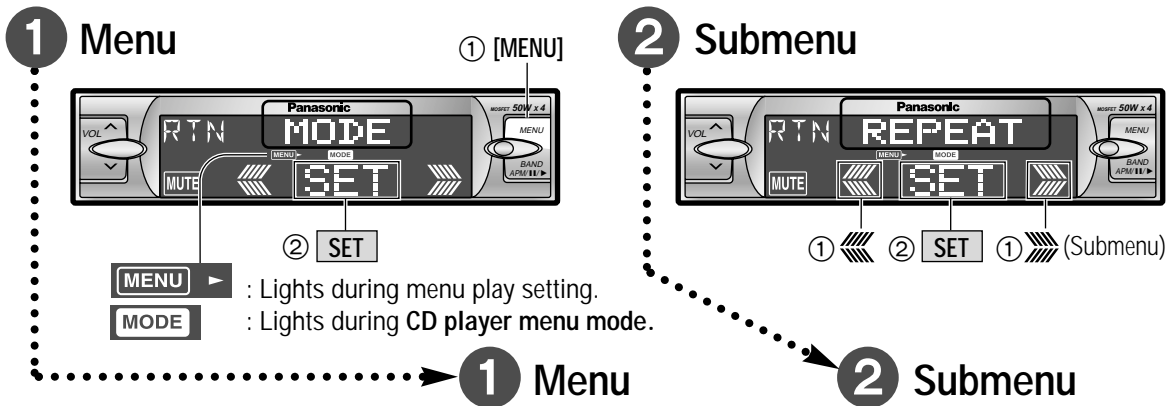

<p>Repeat Play Default: REP OFF</p>	<p>① Press [MENU] during CD playing to display "MODE". ② Press [SET]/[SET] to set.</p>	<p>① Press ◀ or ▶ / [%] or [\$] to select "REPEAT". ② Press [SET]/[SET] to set.</p>
<p>Random Play Default: RAND OFF</p>	<p>① Press ◀ or ▶ / [%] or [\$] to select "RANDOM". ② Press [SET]/[SET] to set.</p>	<p>① Press ◀ or ▶ / ["] or [#] to change setting. [REP ON] : Repeat the current track. [REP OFF] : Cancel</p>

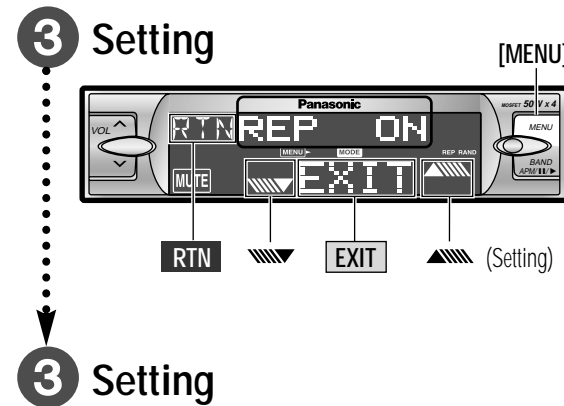 

<p>Press ◀ or ▶ / ["] or [#] to change setting. [REP ON] : Repeat the current track. [REP OFF] : Cancel</p>	<p>Press [6] (REPEAT) to change setting. (When you press a button, the screen on the left is displayed for 2 seconds.)</p>
<p>Press ◀ or ▶ / ["] or [#] to change setting. [RAND ON] : All the available track plays in a random sequence. [RAND OFF] : Cancel</p>	<p>Press [4] (RANDOM) to change setting. On: "RAND" lights. Off: [RAND OFF] (Displayed for 2 seconds.)</p>

Note:


- Press [EXIT]/[MENU]/[MENU], [DISP] (display) to return to the regular mode.
- Press [RTN]/[RET] (RETURN) to return to the previous display.
- **REP**: Lights during repeat play.
- **RAND**: Lights during random play.

Direct setting on the remote control unit when the menu is not displayed

Only for the remote control unit

When the menu is not displayed

<p>Scan Play Default: Off</p>	<p>Press [5] (SCAN) to change setting. On: The first 10 seconds of each track plays in sequence. Off: Cancel</p> <p> Blinks. [SCAN OFF] (Displayed for 2 seconds.)</p>
---	---

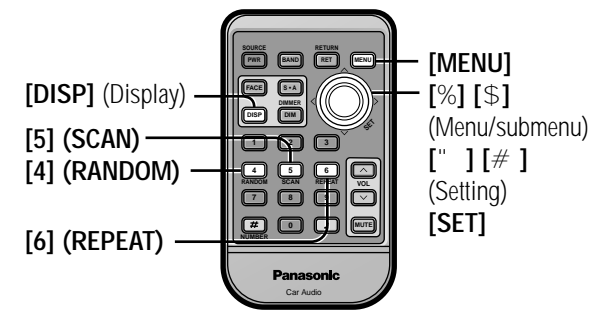 

CD Changer Control

CD changer functions are designed for optional Panasonic CD changer unit.

Preparation:

- Connect the CD changer, and load a magazine (disc).

Note:

- Loading a magazine when the power is off allows the power to be turned on.
- Ejecting the magazine when the unit is in the CD changer mode allows the power to be turned off.
- This unit does not support CD-ROM, CD-R or CD-RW playback through the CD changer. Use the CD changer to listen to normal music CD exclusively.
- Pausing does not function in the CD changer mode.

 
1 CD Changer Mode

(When a CD changer is connected and a magazine is in the changer.)

Press **SOURCE** / **[SOURCE]** to change to CD changer mode. Playback starts automatically.

Note:

- **NO DISC** : Load a magazine with CDs.
- **EJECT** : Magazine is ejected in the CD changer mode.

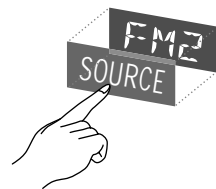


CD changer mode display

Repeat and random indicator
Disc number Track number



- Press **DISC** or **TRC** to change the cursor.

 - Lights when the changer (magazine) is connected.
- Lights when the disc is played.

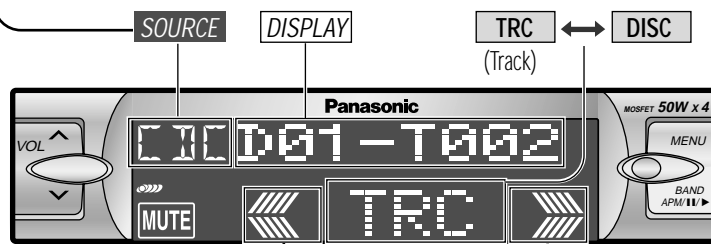

2 Disc Selection

▲ / **[]** : Next disc.

▼ / **[#]** : Previous disc.

3 Track Selection

▶▶ / **[\$]** : Advance to the next track.

◀◀ / **[%]** : Back to the beginning of the current track.
Back to the previous track. (Press twice.)

Track Search

Press and hold.

▶▶▶ / **[\$]** : Fast forward

◀◀◀ / **[%]** : Fast backward

Release to resume the regular play.

Direct Disc Selection

Only for the remote control unit

Example: disc number 10

- ① Press **[#]** (NUMBER).



- ② Press **[1]** **[0]**.

- ③ Press **[SET]** to set.

 
The first track of the corresponding disc starts playing.

Note:

- Press **DISPLAY** / **[DISP]** (display) or **[#]** (NUMBER) to return to the regular mode.
- If a non-existent disc number is input and entered, the command is invalid and the display returns to regular mode.



Display Change

Press **DISPLAY** / **[DISP]** (display) to change the display.

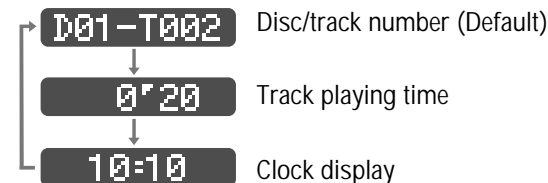


Note:

  - Press **DISPLAY** / **[DISP]** (display) to return to the regular mode.

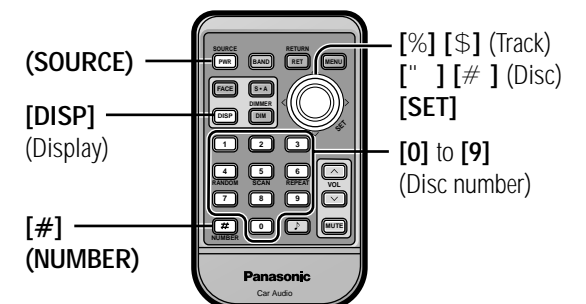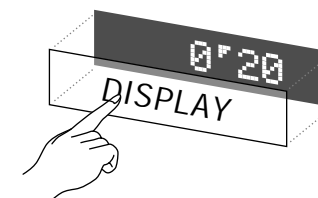


CD Changer Control (Continued)

 Menu Setting on CD Changer Mode

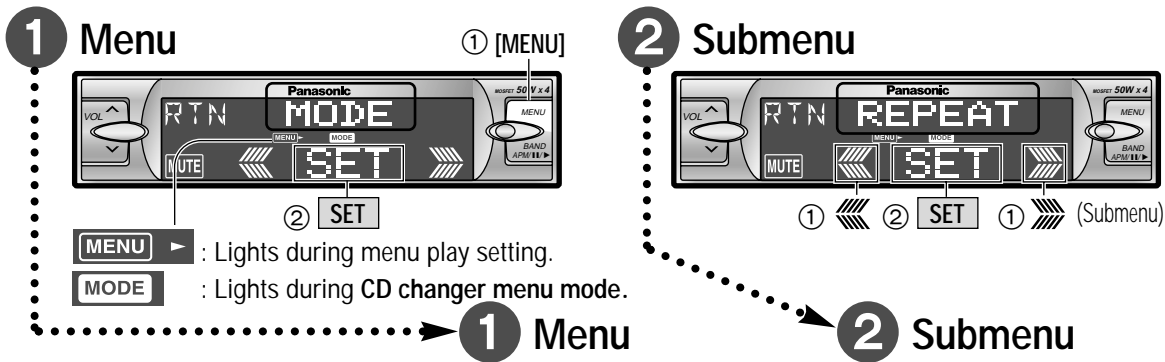

Repeat Play Default: REP OFF	① Press [MENU] during CD changer playing to display "MODE". ② Press [SET]/[SET] to set.	① Press [Left] or [Right] / [%] or [\$] to select "REPEAT". ② Press [SET]/[SET] to set.
Disc Repeat Play Default: D-REP OFF	① Press [MENU] during CD changer playing to display "MODE". ② Press [SET]/[SET] to set.	① Press [Left] or [Right] / [%] or [\$] to select "D-REPEAT". ② Press [SET]/[SET] to set.
Random Play Default: RAND OFF	① Press [MENU] during CD changer playing to display "MODE". ② Press [SET]/[SET] to set.	① Press [Left] or [Right] / [%] or [\$] to select "RANDOM". ② Press [SET]/[SET] to set.
Disc Random Play Default: D-RND OFF	① Press [MENU] during CD changer playing to display "MODE". ② Press [SET]/[SET] to set.	① Press [Left] or [Right] / [%] or [\$] to select "D-RANDOM". ② Press [SET]/[SET] to set.

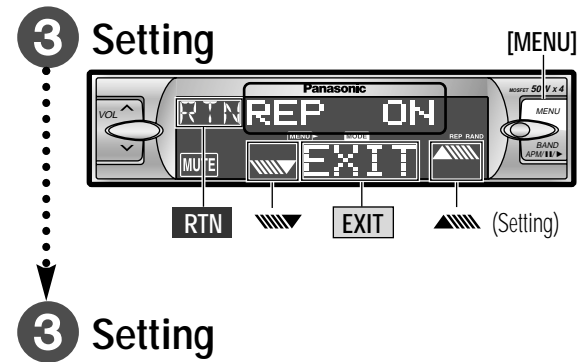 




Press [Up] or [Down] / ["] or [#] to change setting. REP ON : Repeat the current track. REP OFF : Cancel	Press [6] (REPEAT) to change setting. (When you press a button, the screen on the left is displayed for 2 seconds.)
Press [Up] or [Down] / ["] or [#] to change setting. D-REP ON : Repeat the current disc. D-REP OFF : Cancel	Press and hold [6] (REPEAT) for more than 2 seconds to change setting. (When you press a button, the screen on the left is displayed for 2 seconds.)
Press [Up] or [Down] / ["] or [#] to change setting. RAND ON : All the available tracks on all discs plays in a random sequence. RAND OFF : Cancel	Press [4] (RANDOM) to change setting. On: "RAND" lights. Off: RAND OFF (Displayed for 2 seconds.)
Press [Up] or [Down] / ["] or [#] to change setting. D-RND ON : All the available tracks on the current disc plays in a random sequence. D-RND OFF : Cancel	Press and hold [4] (RANDOM) for more than 2 seconds to change setting. On: "RAND" blinks. Off: D-RND OFF (Displayed for 2 seconds.)

- Note:**
- Press [EXIT]/[MENU]/[MENU], [DISP] (display) to return to the regular mode.
 - Press [RTN]/[RET] (RETURN) to return to the previous display.
 - **REP:** Lights during repeat play. Blinks during disc repeat play.
 - **RAND:** Lights during random play. Blinks during disc random play.

Direct setting on the remote control unit when the menu is not displayed

Only for the remote control unit

Scan Play Default: Off	Press [5] (SCAN) to change setting.  Blinks.	On: The first 10 seconds of each track on all discs plays in sequence. Off: Cancel CD SCAN OFF (Displayed for 2 seconds.)
Disc Scan Play Default: Off	Press and hold [5] (SCAN) for more than 2 seconds to change setting.  Blinks.	On: The first 10 seconds of the first track of all the discs plays in sequence. Off: Cancel CD D-SON OFF (Displayed for 2 seconds.)

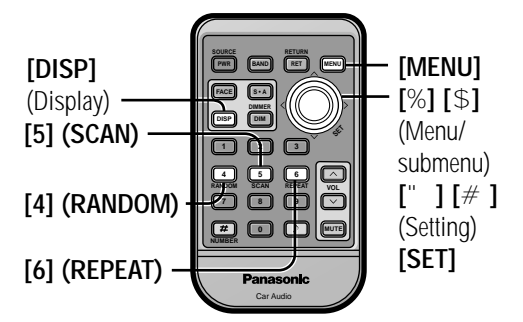 

Front Panel Settings [FACE]

1 Menu



- ① [MENU]
- ② [MUTE] ③ [SET] ② (Menu)
- [MENU] : Lights during menu play setting.
- [FACE] : Lights during FACE mode.
- [AUDIO] : Lights during AUDIO mode.

2 Submenu



- ① [MUTE] ② [SET] ① (Submenu)

3 Setting



- [RTN] [EXIT] (Setting)

Note:

- Press [EXIT]/[MENU]/[MENU], [DISP] (display) to return to the regular mode.
- Press [RTN]/[RET] (RETURN) to return to the previous display.

1 Menu

2 Submenu

Front Panel Brightness

The brightness of the screen can be adjusted to the desired level so that it will fit in with the equipment inside the car and the front panel buttons.

Default: OPEN
Setting range: OPEN, HALF, CLOSE

- ① Press [MENU].
- ② Press [MUTE] or [MUTE] / [%] or [\$] to select "FACE".
- ③ Press [SET]/[SET] to set.

- ① Press [MUTE] or [MUTE] / [%] or [\$] to select "SHUTTER".
- ② Press [SET]/[SET] to set.

Press [MUTE] or [MUTE] / ["] or [#] to change setting. The brightness of the entire front panel changes.

- [OPEN] : Bright (brighter than "HALF")
- [CLOSE] : The entire front panel darkens and the illuminated colors inside the panel change in appearance.
- [HALF] : Bright

(See page 36 for information on changing the brightness of just the display area.)

Color Change

You can change the color of the [VOL " #] [MENU] [BAND] buttons.

Default: 7COLOR
Variety: 5 kinds, LEVEL, 7COLOR

- ① Press [MENU].
- ② Press [MUTE] or [MUTE] / [%] or [\$] to select "FACE".
- ③ Press [SET]/[SET] to set.

- ① Press [MUTE] or [MUTE] / [%] or [\$] to select "COLOR".
- ② Press [SET]/[SET] to set.

Press [MUTE] or [MUTE] / ["] or [#] to change setting.

- [7COLOR] : 5 kinds (below), white and yellow
- [LEVEL] : Changes according to the volume level.
- [RED] : Red
- [PURPLE] : Purple
- [BLUE] : Blue
- [AQUABLUE] : Aqua blue
- [GREEN] : Green

Direct setting on the remote control unit when the menu is not displayed

Press and hold [FACE] for more than 2 seconds to change setting.

(When you press a button, the screen on the left is displayed for 2 seconds.)

Press [FACE] to change setting.

(When you press a button, the screen on the left is displayed for 2 seconds.)

Audio and Sound Settings [AUDIO]

1 Menu

- ① Press [MENU].
- ② Press [MUTE] or [MUTE] / [%] or [\$] to select "AUDIO".
- ③ Press [SET]/[SET] to set.

2 Submenu

- ① Press [MUTE] or [MUTE] / [%] or [\$] to select "S-HDB".
- ② Press [SET]/[SET] to set.

3 Setting

Press [MUTE] or [MUTE] / ["] or [#] to change setting.

- [BOOM] : The bass sounds of the speakers are strongly emphasized. "(" lights.
- [TIGHT] : The bass sounds of the speakers are moderately emphasized. "(" lights. (The sounds of the subwoofer can be heard clearly.)
- [SHDB OFF] : S-HDB is non-active.

Direct setting on the remote control unit when the menu is not displayed

Press [S-HDB] (S-HDB) to change setting.

(When you press a button, the screen on the left is displayed for 2 seconds.)

Audio and Sound Settings [AUDIO] (Continued)

1 Menu



① [MENU]
② [SET] (Menu)
[MENU] : Lights during menu play setting.
[AUDIO] : Lights during AUDIO mode.

2 Submenu



① [Left/Right Arrow] (Submenu)
② [SET]

3 Setting



[RTN] [EXIT] (Setting)

Note:

- Press [EXIT]/[MENU]/[MENU], [DISP] (display) to return to the regular mode.
- Press [RTN]/[RET] (RETURN) to return to the previous display.

Bass and Treble

You can adjust the bass and treble sound.
Default: BAS (Bass) 0 dB
TRE (Treble) 0 dB
Setting range: -12 dB to +12 dB
(by 2 dB)

Balance and Fader

You can adjust the sound balance among the front, rear, right and left speakers.
Default: BAL (Balance) CNT (Center)
FAD (Fader) CNT (Center)
Setting range: 15 levels each

Subwoofer Level

You can change the subwoofer volume level.
Default: 0 dB
Setting range: -∞ (subwoofer mute),
-6 dB to +6 dB (by 2 dB)

Subwoofer Low Pass Filter

Select the upper limit frequency of the sound from subwoofer.
Default: 120 Hz
Setting range: 120 Hz/80 Hz

- ① Press [MENU].
- ② Press [Left/Right Arrow] / [%] or [\$] to select "AUDIO".
- ③ Press [SET]/[SET] to set.

- ① Press [Left/Right Arrow] or [Up/Down Arrow] / [%] or [\$] to select "BASS".
- ② Press [SET]/[SET] to set.

- ① Press [Left/Right Arrow] or [Up/Down Arrow] / [%] or [\$] to select "TREBLE".
- ② Press [SET]/[SET] to set.

- ① Press [Left/Right Arrow] or [Up/Down Arrow] / [%] or [\$] to select "BALANCE".
- ② Press [SET]/[SET] to set.

- ① Press [Left/Right Arrow] or [Up/Down Arrow] / [%] or [\$] to select "FADER".
- ② Press [SET]/[SET] to set.

- ① Press [Left/Right Arrow] or [Up/Down Arrow] / [%] or [\$] to select "SUB-W LEV".
- ② Press [SET]/[SET] to set.

- ① Press [Left/Right Arrow] or [Up/Down Arrow] / [%] or [\$] to select "SUB-W FRQ".
- ② Press [SET]/[SET] to set.

3 Setting

Press [Up/Down Arrow] or [Left/Right Arrow] / ["] or [#] to adjust the level.

[Up/Down Arrow] / ["] : Increase the bass.

[Down/Left Arrow] / [#] : Decrease the bass.

BAS 0dB

Press [Up/Down Arrow] or [Left/Right Arrow] / ["] or [#] to adjust the level.

[Up/Down Arrow] / ["] : Increase the treble.

[Down/Left Arrow] / [#] : Decrease the treble.

TRE 0dB

Press [Up/Down Arrow] or [Left/Right Arrow] / ["] or [#] to adjust the level.

[Up/Down Arrow] / ["] : Right enhanced.

[Down/Left Arrow] / [#] : Left enhanced.

BAL CNT

Press [Up/Down Arrow] or [Left/Right Arrow] / ["] or [#] to adjust the level.

[Up/Down Arrow] / ["] : Front enhanced.

[Down/Left Arrow] / [#] : Rear enhanced.

FAD CNT

Press [Up/Down Arrow] or [Left/Right Arrow] / ["] or [#] to adjust the level.

[Up/Down Arrow] / ["] : Increase the level.

[Down/Left Arrow] / [#] : Decrease the level.

LEV 0dB

Press [Up/Down Arrow] or [Left/Right Arrow] / ["] or [#] to change the setting 120 Hz or 80 Hz.

80Hz ↔ 120Hz


[DISP] (Display)



[MENU]
[%] [\$]
(Menu/submenu)
["] [#]
(Setting)
[SET]

Picture (Display) Settings [PICTURE]

 1 Menu

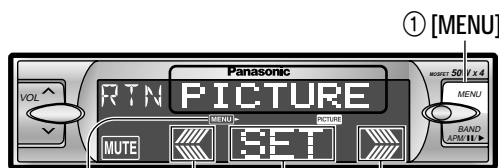

① [MENU]
② [MUTE] ③ [SET] ② [MENU]
[MENU] : Lights during menu play setting.
[PICTURE] : Lights during PICTURE mode.

2 Submenu



① [MUTE] ② [SET] ① [MUTE] (Submenu)

1 Menu

2 Submenu

Dimmer (display brightness setting range)

The brightness of just the display area of the front panel changes.



Default: DIMMER 3
Setting range: DIMMER 1 to 3

- Press [Left] or [Right] / [%] or [F] to select "DIMMER".
- Press [SET] / [SET] to set.

Spectrum Analyzer (S-A) Display Pattern

Default: KEY
Variety: KEY, PATTERN 1 to 5

- Press [MENU].
- Press [Left] or [Right] / [%] or [F] to select "PICTURE".
- Press [SET] / [SET] to set.

 
Contrast

Allows you to adjust the display contrasts for better viewing.

Default: CONT 3
Setting range: CONT 1 to 5

- Press [Left] or [Right] / [%] or [F] to select "CONTRAST".
- Press [SET] / [SET] to set.

3 Setting

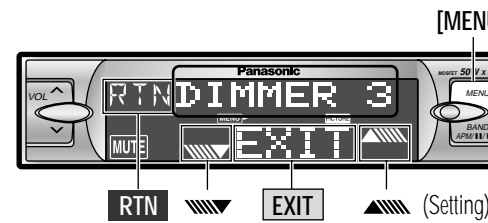

Note:

- Press [EXIT] / [MENU] / [MENU], [DISP] (display) to return to the regular mode.
- Press [RTN] / [RET] (RETURN) to return to the previous display.
- Press Spectrum Analyzer display on S-A setting to return to the previous display.

3 Setting

Press [Up] or [Down] / ["] or [#] to change setting.

- [DIMMER 3] : Bright
- [DIMMER 2] : Medium
- [DIMMER 1] : Dark

(See page 32 for information on changing the brightness of the entire front panel.)



Press [Up] or [Down] / ["] or [#] to change setting.

- [KEY] : S-A off (regular display)
- [PATTERN1] : S-A 1
- [PATTERN2] : S-A 2
- [PATTERN3] : S-A 3
- [PATTERN4] : S-A 4
- [PATTERN5] : S-A 5

Press [Up] or [Down] / ["] or [#] to change setting.

- [CONT 5] Level up
- [CONT 4]
- [CONT 3]
- [CONT 2]
- [CONT 1] Level down

 
Direct setting on the remote control unit when the menu is not displayed

Press [DIM] (DIMMER) to change setting.

(When you press a button, the screen on the left is displayed for 2 seconds.)


Press [S-A] to change setting.

(When you press a button, the screen on the left is displayed for 2 seconds.)

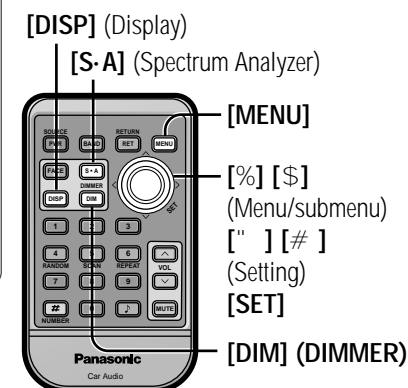


Function Settings [FUNCTION]

 1 Menu

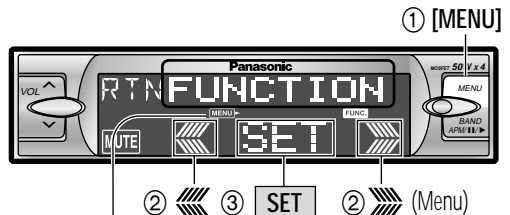

[MENU] : Lights during menu play setting.
[FUNC.] : Lights during FUNCTION mode.

 2 Submenu

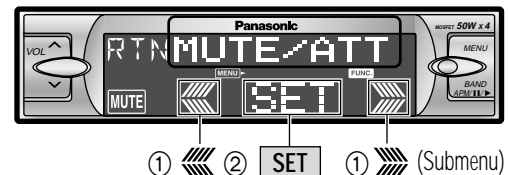

1 Menu

2 Submenu

Mute/Attenuation

You can select how much to lower the volume when **[MUTE]** /**[MUTE]** is pressed.
 Default: KEY: MUTE
 Setting range: KEY: MUTE, KEY: ATT

① Press **[MENU]**.
 ② Press **[MUTE]** or **[MUTE]** / **[%]** or **[\$]** to select "FUNCTION".
 ③ Press **[SET]** /**[SET]** to set.

① Press **[MUTE]** or **[MUTE]** / **[%]** or **[\$]** to select "MUTE/ATT".
 ② Press **[SET]** /**[SET]** to set.

Button Operation Sound

Enable or disable the beep or button operation.
 Default: BEEP ON

① Press **[MENU]**.
 ② Press **[MUTE]** or **[MUTE]** / **[%]** or **[\$]** to select "FUNCTION".
 ③ Press **[SET]** /**[SET]** to set.

① Press **[MUTE]** or **[MUTE]** / **[%]** or **[\$]** to select "BEEP SET".
 ② Press **[SET]** /**[SET]** to set.

Security Function

The security indicator (LED) blinks when the removable face plate is removed from the unit.
 Default: SLED ON

① Press **[MENU]**.
 ② Press **[MUTE]** or **[MUTE]** / **[%]** or **[\$]** to select "FUNCTION".
 ③ Press **[SET]** /**[SET]** to set.

① Press **[MUTE]** or **[MUTE]** / **[%]** or **[\$]** to select "SECURITY".
 ② Press **[SET]** /**[SET]** to set.

 
Display Setting

You can select display pattern on the unit off.
 Default: BLACK
 Setting range: DEMO, CLOCK, BLACK

① Press **[MENU]**.
 ② Press **[MUTE]** or **[MUTE]** / **[%]** or **[\$]** to select "FUNCTION".
 ③ Press **[SET]** /**[SET]** to set.

① Press **[MUTE]** or **[MUTE]** / **[%]** or **[\$]** to select "OFF DISP".
 ② Press **[SET]** /**[SET]** to set.

3 Setting

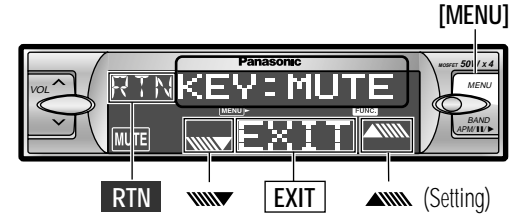

3 Setting

 
Press **[MUTE]** or **[MUTE]** / **[%]** or **[\$]** to change setting.
KEY: MUTE : No sound.
KEY: ATT : Decrease the volume to 1/10. (Attenuation)

Press **[MUTE]** or **[MUTE]** / **[%]** or **[\$]** to change setting.
BEEP ON : Operation sound (beep) is on.
BEEP OFF : Operation sound (beep) is off.

Press **[MUTE]** or **[MUTE]** / **[%]** or **[\$]** to change setting.
SLED ON : Security function is active.
SLED OFF : Security function is non-active.

Press **[MUTE]** or **[MUTE]** / **[%]** or **[\$]** to change setting.
BLACK : Black display
DEMO : Demonstration display
CLOCK : Clock display is on.

Note:
 • Press **[EXIT]** /**[MENU]**/**[MENU]**, **[DISP]** (display) to return to the regular mode.
 • Press **[RTN]**/**[RET]** (RETURN) to return to the previous display.

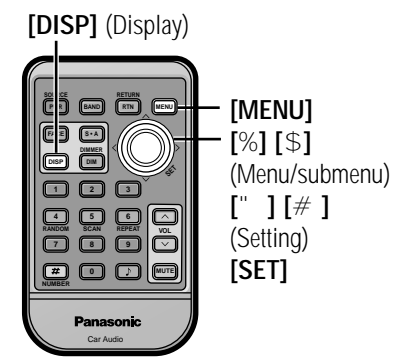

Security function

When the key in the ignition is turned OFF.
 • Security message will be active.
PANEL!
 • The panel removable alarm will be active.

When the removable face plate is removed.
 • The security indicator blinks. (→ page 53)

Direct setting on the remote control unit on the unit off
 Press **[DISP]** (display) to change setting on the unit off.