

Pioneer
Quick start guide
 CD RDS RECEIVER
DEH-P8100BT

English

CD RDS RECEIVER

This guide is intended to guide you through the basic functions of this unit.
 For details, please refer to the Operation manual stored in CD-ROM.
 Furthermore, manuals are available on the website.

<http://www.pioneer.eu>

<OG020188A/N> EW

: Press
 : Press and hold
 : Rotate
 : Push in the direction of the arrow

Basic operation

Power on

Power off

Select a source

Source can be selected in the following order:
Tuner - TV - DVD - **Built-in CD player** - MCD - iPod -
USB 1/iPod 1 - **USB 2/iPod 2** - External unit 1 -
 External unit 2 - **AUX 1** - **AUX 2** - **BT Audio**

Source name : Built-in source

Volume adjust

Call a phone list

Select **TEL** as a source

Tuner operation

Select a band

Select a preset channel

- Display the preset list
- Change a channel
- Select a channel

Select a frequency

Select a preset frequency

Store the strongest broadcast frequencies

- Display the main menu
- Select FUNCTION
- Display the function menu
- Select BSM
- Turn BSM on

Built-in CD and USB operation

Select a song from list

- Display the list
- Select a song

Play a selected song (If folder is selected, see lower tier.)

Play all songs in a selected folder

Return to higher tier

Select a track

Select a folder

Display the text information

iPod operation

Select a song from list

- Display the list
- Change the category

Select a category

Play all songs in a selected category

Return to the previous category

Select a track (chapter)

Display the text information

Shuffle all tracks

<KSNZX> <08L00000>

Bluetooth connection

PIN code : 0000


Using a Bluetooth device to pair

- Display the main menu
- Select CONNECTION
- Display the connection menu
- Select Open device
- Select a device
- Open a connection
- Use the device to establish a connection

Connecting a paired Bluetooth device and selecting a service

- Display the main menu
- Select CONNECTION
- Display the connection menu
- Select Paired device
- Select a device
- Display the service menu
- Select a service
- Establish a connection

What's what

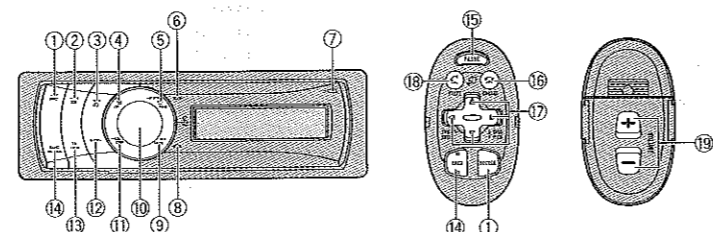

Head unit

- SRC/OFF button**
Press to cycle through all the available sources. Press and hold to turn the unit off.
- iPod button**
Press to turn random function on or off while using CD or USB. While using an iPod, press to shuffle all tracks. Press and hold to switch the control mode while using an iPod. If using the iPod with an interface adapter (CD-IB100I), press to switch the shuffle function.
- VOICE/PHONE button**
Press to start voice recognition for telephone call.
- /LIST button**
Press to display the track title list, folder list, file list or preset channel list depending on the source. Press and hold to switch to link play mode while using an iPod.
- PHONE/BT MENU button**
Press to display the phone book list. While operating a phone call, press to end a call, reject an incoming call or cancel making a call. Press and hold to select TEL as a source.
- " " indicator**
Lights up when your cellular phone is connected via Bluetooth wireless technology. When selecting a source other than TEL, it flashes while using hands-free phoning.
- ! button**
Press to open the front panel.
- " " indicator**
Lights up when your Bluetooth audio player is connected via Bluetooth wireless technology.
- MUTE/HOLD button**
Press to turn off the sound. To turn on the sound, press again. While talking on the phone, press to put the call on hold.

MULTI-CONTROL

Move to perform manual seek tuning, fast forward, reverse and track search controls. Also used for controlling functions. Turn to increase or decrease the volume.

- While using hands-free phoning, you can select **Far end Volume** and switch **Far end Volume** and **SCO Private Mode** in **FUNCTION** by pressing **MULTI-CONTROL**.

DISP/SCRL button

Press to select different displays. Press and hold to scroll the text information.

S.Rtrv button

Press to switch advanced sound retriever settings.

TA/NEWS button

Press to turn TA function on or off. Press and hold to turn NEWS function on or off.

BAND/ESC/CANCEL button

Press to select among three FM bands and MW/LW bands. Press to return to the ordinary display when operating the menu. While using voice recognition function, press to cancel voice recognition.

Steering remote control

Operation is the same as when using the buttons on the head unit.

PHONE button

Press to display the phone book list. While operating a phone call, press to end a call, reject an incoming call or cancel making a call. Press and hold to select TEL as a source.

/CANCEL button

While operating the phone source, press to end a call or reject an incoming call. While using voice recognition function, press to cancel voice recognition.

▲/▼/◀/▶ buttons

Press to perform manual seek tuning, fast forward, reverse and track search functions. Also used for controlling functions.

/START button

Press to start talking on the phone while operating a phone source. Press to start voice recognition for telephone call.

+/- (VOLUME) buttons

Press to increase or decrease the volume.

Notepad

