



**NAVMAN**




**EZY-Series**

# **EZY 30/40 Series**

## **Hardware User Manual**

# Important safety information

## PLEASE READ CAREFULLY BEFORE INSTALLING PRODUCT IN VEHICLE

	This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.
 <b>WARNING</b>	WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.
 <b>CAUTION</b>	CAUTION indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.
<b>CAUTION</b>	CAUTION used without the safety alert symbol indicates a potentially hazardous situation which, if not avoided, may result in property damage.



Removing original equipment, adding accessories or modifying your vehicle could affect the vehicle's safety or make it illegal to operate in some jurisdictions.

Follow all product instructions and all instructions in your vehicle owner's manual regarding accessories or modifications.

Consult your country's and/or state's laws regarding operation of a vehicle with any accessories or modifications.

It is your sole responsibility to place, secure and use your Navman in a manner that will not cause accidents, personal injury or property damage. Always observe safe driving practices.

Do not mount your Navman in a way that may interfere with the safe operation of the vehicle, the deployment of air bags or other safety equipment.

Do not operate your Navman while driving.

Before you use your Navman for the first time, familiarise yourself with your device and its operation.

 
On main roads, the distance to an exit calculated by your Navman may be further than the distance shown on road signs. Road signs show the distance to the start of an exit while your Navman shows the distance to the next intersection, i.e., the end of the exit ramp or road. To prepare to exit a road, always follow distance information on road signs.

The use of information regarding safety or speed camera locations may be subject to local laws in the country of use. You are responsible for checking that you can legally use the information in your country or in the country where the information will be used.



Do not handle your Navman while it is hot. Let the product cool, out of direct sunlight.

At full power, prolonged listening to your Navman via headphones or earphones can damage the ear of the user.



Do not expose your Navman to direct sunlight in an unattended vehicle for prolonged periods. Overheating may damage the unit and void warranty.

**To discourage theft, do not leave your Navman, mounting bracket or any cables in plain view in an unattended vehicle.**

### Warning Notice to Drivers in the United States

State law may prohibit drivers in states such as Arizona, California and Minnesota from mounting objects on their windshields while driving. Please make sure you research and follow your most current State laws. An alternative mounting option may be provided in the box with your product; or see our website for additional mounting alternatives. Navman does not take any responsibility for any fines, penalties, or damages that may be incurred as a result of disregarding this notice.

# Home charger-specific safety information



To charge your Navman from the mains power, use the home charger (Model: MII050100; Input: 100-240V AC 50-60Hz; Output: 5V DC 1A Max) supplied by Navman as an accessory (may be sold separately). Using other home chargers with your Navman could result in serious injury or property damage.

Never use the charger if the plug or cord is damaged.

Do not expose the charger to moisture or water. Do not use the charger in a high moisture environment. Exposure to water may cause electrical sparks or fires.

Never touch the charger when your hands or feet are wet.

Allow adequate ventilation around the charger when using it to operate your Navman or charge the internal battery. Do not cover the charger with paper or other objects that will reduce ventilation. Do not use the charger while it is inside a carrying case or other container.

Ensure that the charger is connected to a power source with the correct fitting and voltage requirements. The voltage requirements can be found on the home charger casing and/or packaging.

Do not attempt to service the charger as this could result in personal injury. Replace the charger if it is damaged or exposed to excess moisture.

## Internal battery-specific safety information



Your Navman contains a non-replaceable internal lithium-ion polymer battery. The battery may burst or explode if mishandled, releasing hazardous chemicals. To reduce the risk of fire or burns, do not disassemble, crush or puncture the battery.

Recycle or dispose of the battery safely and properly according to local laws and regulations. Do not dispose of the battery in fire or water.



Only use the correct home charger (may be sold separately), usb cable or in-car charger supplied by Navman to charge your Navman internal battery.

Only use your Navman internal battery with your Navman unit.

The Navman battery will stop charging when the ambient temperature is less than 0°C (32°F) or more than 45°C (113°F).

**Failure to adhere to these warnings and cautions may lead to death, serious injury or property damage. Navman disclaims all liability for installation or use of your Navman that causes or contributes to death, injury or property damage or that violates any law.**

## Compliance



**WARNING** This product, its packaging and its components contain chemicals known to the State of California to cause cancer, birth defects or reproductive harm. This Notice is being provided in accordance with California's Proposition 65.



For regulatory identification purposes:

- EZY 30 Series is assigned a model name of N276.
- EZY 40 Series is assigned a model name of N271.

**Marking labels located on the exterior of your Navman indicate the regulations that your model complies with. Please check the marking labels on your Navman and refer to the corresponding statements in this chapter. Some notices apply to specific models only.**



**The user needs to switch off the Navman when exposed to areas with potentially explosive atmospheres such as petrol stations, chemical storage depots and blasting operations.**

## WEEE



This product must not be disposed of as normal household waste, in accordance with the EU directive for waste electrical and electronic equipment (WEEE - 2002/96/EC). Instead, it should be disposed of by returning it to the point of sale, or to a municipal recycling collection point.

# Contents

---

- Important safety information ..... 2
  - Home charger-specific safety information ..... 3
  - Internal battery-specific safety information..... 3
  - Compliance ..... 3
  - WEEE ..... 4
- Contents ..... 5
- Welcome..... 6
  - Important information for using the manual..... 6
- Mounting your Navman in a vehicle ..... 7
  - EZY 30 Series..... 7
  - EZY 40 Series..... 8
  - Enabling Traffic (TMC) Reception ..... 8
- Getting to know your Navman ..... 9
  - EZY 30 Series..... 9
  - EZY 40 Series..... 10
- How do I turn on my Navman? ..... 11
  - Using the power switch ..... 11
- How do I charge the battery? ..... 12
  - How do I charge the battery in a vehicle? ..... 12
  - How do I charge the battery via my computer? ..... 12
  - How do I charge the battery at home or work? ..... 12
- How do I insert a memory card? ..... 13
- Reference ..... 14
  - What is GPS? ..... 14
  - How does my Navman receive GPS signals? ..... 14
  - Caring for your Navman..... 14
  - Troubleshooting..... 15
  - Navman Customer Support ..... 15

# Welcome

---

Thank you for purchasing this Navman. Please read this manual carefully before using your Navman for the first time. Keep this manual in a safe place and use as your first point of reference.

## Important information for using the manual

It is important to understand the terms and typographical conventions used in this manual.




### Formatting

The following kinds of formatting in the text identify special information:

Convention	Type of Information
<b>Bold</b>	Components or items displayed on screen, including buttons, headings, field names and options.
<i>Italics</i>	Indicates the name of a screen.

### Icons

The following icons are used throughout this manual:

Icon	Description
	Note
	Tip
	Warning

### Terms

The following terms are used throughout this manual to describe user actions.

 
Term	Description
Press	Press and release a button quickly.
Tap	Press and release an item displayed on the touch screen.
Select	Tap an item in a list or tap a command from a menu.

# Mounting your Navman in a vehicle


## CAUTION:

- Never mount your Navman where the driver's field of vision is blocked.
- If the windscreen is tinted with a reflective coating, it may be athermic and impact the GPS reception. In this instance, please mount your Navman where there is a "clear area" - usually just beneath the rear-view mirror.
- To protect your Navman against sudden surges in current, connect the in-car charger only after the car engine has been started.
- Never expose your Navman to extreme heat or direct sunlight for prolonged periods. Overheating may damage your Navman.

## EZY 30 Series

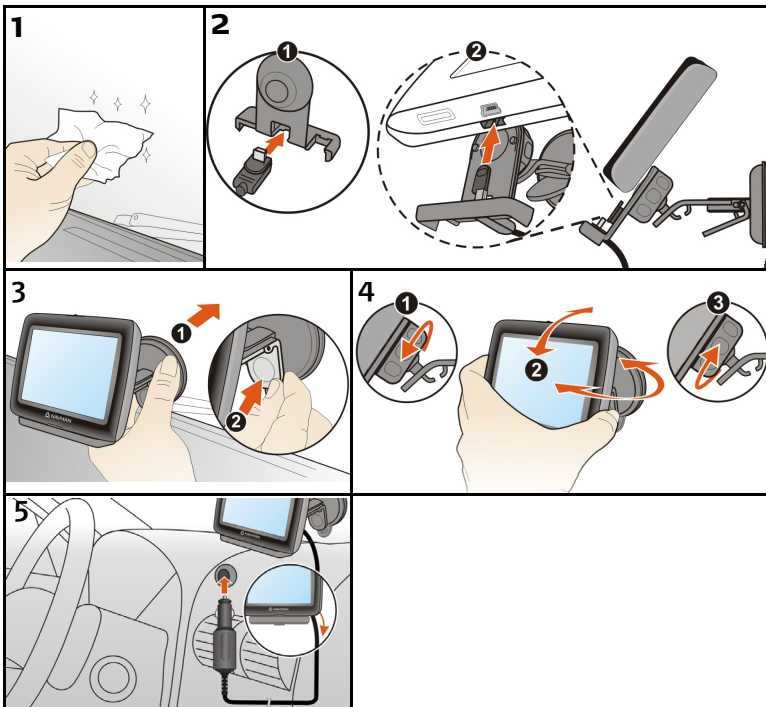

## EZY 40 Series

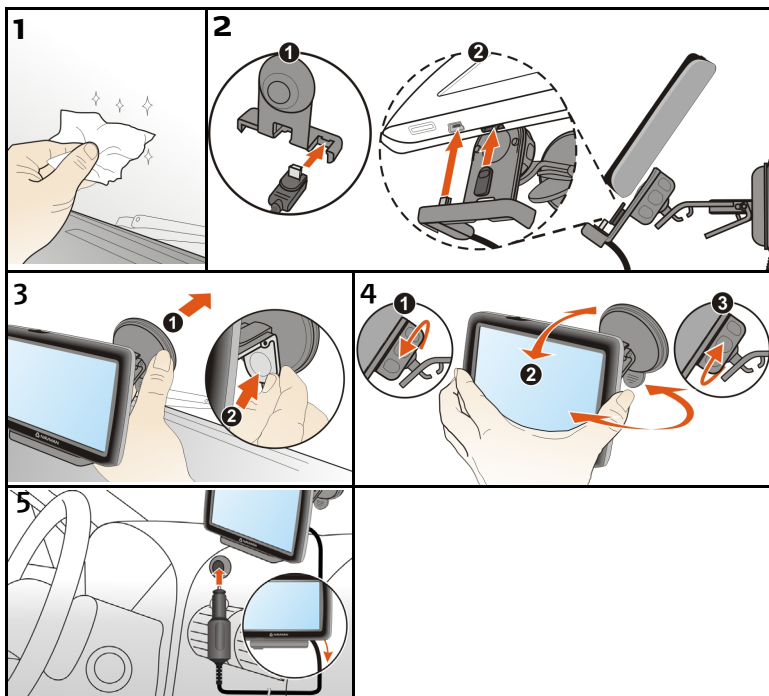 

## Enabling Traffic (TMC) Reception

**Traffic information is available via an optional accessory.**

Depending on the model of your Navman you can receive live traffic information in one of two ways:

- If your Navman has a built-in TMC receiver, you can receive live traffic information\* via the in-car charger which is used as an antenna.
- If your Navman does not have a built-in TMC receiver, you will need to install the TMC accessory kit (may be sold separately – see [www.navman.com](http://www.navman.com) for details).

For information on using traffic information on your Navman, see the *Software User Manual*.

 
\* Optional TMC accessory kit is required. See [www.navman.com](http://www.navman.com) for more details.



# Getting to know your Navman


---

## EZY 30 Series

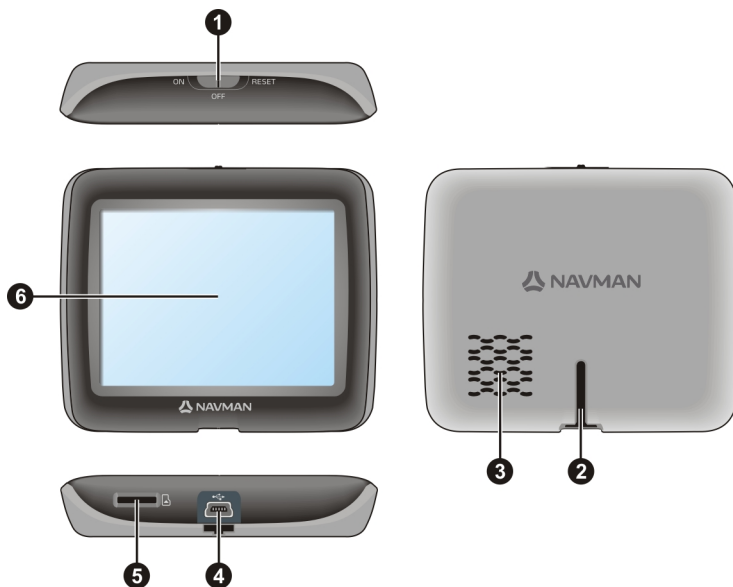

- ❶ Power switch
- ❷ Cradle slot
- ❸ Speaker
- ❹ Connector for in-car charger, USB cable, home charger (may be sold separately) and TMC accessory kit (may be sold separately).
- ❺ Slot for MicroSD memory card
- ❻ Touch screen

# EZY 40 Series

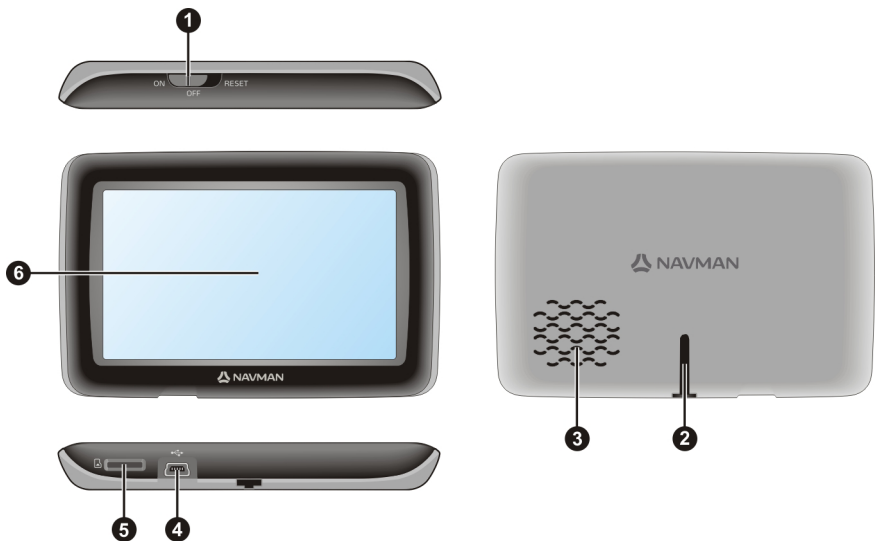 


- 1 Power switch
- 2 Cradle slot
- 3 Speaker
- 4 Connector for in-car charger, USB cable, home charger (may be sold separately) and TMC accessory kit (may be sold separately).
- 5 Slot for MicroSD memory card
- 6 Touch screen


# How do I turn on my Navman?

 ---

## Using the power switch

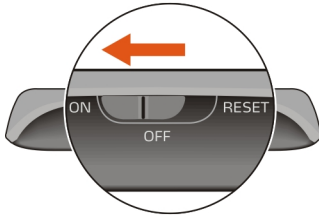

EZY 30 series

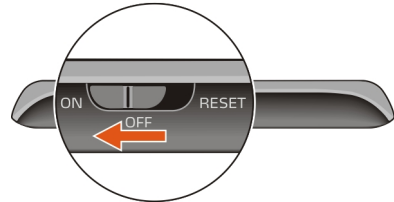 

EZY 40 series

- To turn on your Navman, slide the power switch to the **ON** position.
- To turn off your Navman, slide the power switch to the **OFF** position. Your Navman will enter a suspended state. When you next turn it on, your Navman will return to the Main Menu.
- To reset your Navman, slide the power switch to the **RESET** position. When your Navman has turned off, slide the power switch to the **ON** position.

# How do I charge the battery?

---

Your Navman has an internal battery that when fully charged, should provide power for up to 2 hours. The battery can take up to 4 hours to fully charge.

 


The battery may not be fully charged when you use your Navman for the first time.

**CAUTION:** For optimal performance of the battery, note the following:

- Do not charge the battery when the temperature is high (e.g. in direct sunlight).
- There is no need to fully discharge the battery before charging.
- When leaving your Navman for long periods, slide the power switch to the RESET position to save internal battery power.
- Fully charging the battery once per month will help the device retain GPS fix.


## How do I charge the battery in a vehicle?

To charge your Navman in a vehicle, plug the in-car charger into  on the bottom of your Navman and the other end into the vehicle power socket.

## How do I charge the battery via my computer?




For optimal charging results, ensure that your Navman is turned off while connected to your computer.

1. Turn on your computer.
2. Plug the large end of the USB cable directly into a USB port on your computer (not a USB hub) and plug the small end into  on the bottom of your Navman.

**CAUTION:** When your Navman is turned on and connected to a computer, it is recognised as an external mass-storage device. Do NOT delete any files that are pre-installed on your Navman. Deleting the files can cause your Navman to crash

## How do I charge the battery at home or work?

You can use an optional home charger to charge the battery.

To charge your Navman using a mains power socket, plug the home charger cable into  on the bottom of your Navman and the mains power charger into the power socket.



The home charger is not included with all models and may be purchased separately (see [www.navman.com](http://www.navman.com) for details).

# How do I insert a memory card?

**CAUTION:** Do not apply pressure to the centre of the memory card.



EZY 30 series



EZY 40 series

Hold the MicroSD card by the edges and gently insert it into the slot as shown in the above diagram of your Navman.

- To remove a card, gently push the top edge of the card inwards to release it, then pull it out of the slot.

# Reference

 
---

## What is GPS?

The Global Positioning System (GPS) is available at any time, free of charge, and is accurate to within 5m (15ft). GPS navigation is made possible by a network of satellites that orbit the Earth at around 20,200km (12,552mi). Each satellite transmits a range of signals which are utilised by GPS receivers, such as your Navman, to determine an exact location. Although a GPS receiver can detect signals from up to 12 satellites at any time, only four signals are required to provide a position or "GPS fix" (latitude and longitude), for vehicle navigation systems.

## How does my Navman receive GPS signals?

Your Navman receives GPS signals via the internal GPS antenna. To guarantee the optimum GPS signal strength, ensure your Navman is outdoors, or in a vehicle outdoors, and has an unobstructed view of the sky. GPS reception is not usually affected by weather, however, very heavy rain or snow may have a negative effect on your reception.

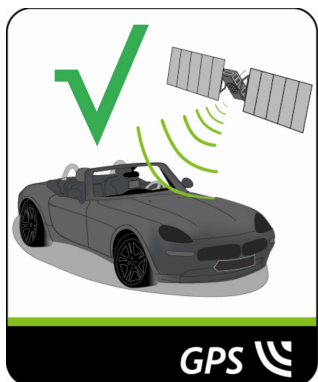

To obtain a faster GPS fix, ensure car is stationary and battery is fully charged once per month.

## Caring for your Navman

Taking good care of your Navman will ensure trouble-free operation and reduce the risk of damage to your Navman:

- Keep your Navman away from excessive moisture and extreme temperatures.
- Avoid exposing your Navman to direct sunlight or strong ultraviolet light for extended periods of time.
- Do not place anything on top of your Navman or drop objects on your Navman.
- Do not drop your Navman or subject it to severe shock.
- Do not subject your Navman to sudden and severe temperature changes. This could cause moisture condensation inside the unit, which could damage your Navman. In the event of moisture condensation, allow your Navman to dry out completely before use.
- The screen surface can easily be scratched. Avoid touching it with sharp objects. Non-adhesive generic screen protectors designed specifically for use on portable devices with LCD panels may be used to help protect the screen from minor scratches.

- Never clean your Navman when it is turned on. Use a soft, lint-free cloth to wipe the screen and the exterior of your Navman.
- Do not use paper towels to clean the screen.
- Never attempt to disassemble, repair or make any modifications to your Navman. Disassembly, modification or any attempt at repair could cause damage to your Navman and even bodily injury or property damage and will void any warranty.
- Do not store or carry flammable liquids, gases or explosive materials in the same compartment as your Navman, its parts or accessories.

## Troubleshooting

If you encounter a problem you cannot solve, contact an authorised service centre for assistance.

Problem	Steps to Take and things to check	What Next?
The unit is not turning on/charging	Try to charge the unit through a USB cable connected to a computer. If the unit charges then the issue is with the in car charger. If the unit still fails to charge, then the fault is with the unit.	Contact technical support on 1300 628 626 and an RMA will be created to fix the unit or replace the in car charger.
I can not get a GPS Signal	Make sure you are stationary and have a clear line of site to the sky. If this fails to resolve the issue, please reset the GPS chip through the Settings menu of your unit.	If the fault is still not resolved, please visit our self help site on <a href="http://www.navman.com.au/support">www.navman.com.au/support</a> or contact our technical support team.
My unit is always showing that the speed limit is 70 kph even when it is not	The units are set at a manual speed limit defaulted at 70 kph. This can be changed through the 'Safety' section of your 'Settings' menu.	If the fault is still not resolved, please visit our self help site on <a href="http://www.navman.com.au/support">www.navman.com.au/support</a> or contact our technical support team.
The unit is not showing any addresses in my state.	When you type in an address through the 'Find' Menu, please ensure that the correct state for the destination is showing after 'Find in:...'. If the correct state is not selected, no results will be shown.	If the fault is still not resolved, please visit our self help site on <a href="http://www.navman.com.au/support">www.navman.com.au/support</a> or contact our technical support team.
Where is my product key? I want to activate my unit.	There is no need to activate your unit in anyway. This Activation tab within the NavDesk software is for subscriptions, travel books, international maps and map upgrades only. Your unit will work straight out of the box and there is no need to activate it in anyway.	If the fault is still not resolved, please visit our self help site on <a href="http://www.navman.com.au/support">www.navman.com.au/support</a> or contact our technical support team.

## Navman Customer Support

To report a faulty product or speak to a member of our Technical Support team, contact:

Australia: 1300 NAVMAN (628626), or visit [www.navman.com.au](http://www.navman.com.au).

New Zealand: 0800 GO NAVMAN (46 628626), or visit [www.navman.co.nz](http://www.navman.co.nz).



NAVMAN

EZY-Series

# **EZY 30/40 Series**

## **Software User Manual**



# Contents

---

- Contents ..... 2
- Welcome..... 4
- How do I use the touch screen? ..... 5
  - Navigating on the screen ..... 5
- How do I get started? ..... 6
- Main Menu ..... 7
  - How do I navigate through the menu screens? ..... 7
- How do I go from A-B? ..... 9
  - How do I plan my first trip? ..... 9
  - How do I preview the destination on map? ..... 10
- How do I view my route? ..... 11
  - The driving map ..... 11
  - How do I view my route statistics? ..... 12
  - How do I adjust the volume? ..... 12
  - How do I zoom in/out the map? ..... 13
  - What if I miss a turn? ..... 13
  - Smart Route ..... 14
- How do I search for a POI by type? ..... 15
- How do I search by keyword? ..... 17
- How do I receive current traffic information via TMC? ..... 18
  - How will I know when a Traffic Event occurs? ..... 18
  - Traffic Overview screen ..... 18
  - Traffic messages ..... 21
- My Places ..... 22
  - How do I save a location as My Place or Home? ..... 22
  - How do I navigate to a location I have saved? ..... 22
  - How do I navigate to Home? ..... 23
  - How do I navigate to a recent place? ..... 23
  - How do I edit the name of a location in My Places? ..... 24
  - How do I delete a saved location? ..... 24
- What is NEAR ME? ..... 25
  - How do I search for a POI using NEAR ME? ..... 25
- What can I customise? ..... 27
  - Audio ..... 27
  - Screen ..... 28
  - Safety ..... 28
  - Maps ..... 29
  - Route options ..... 30
  - Language ..... 30

Units.....	31
Device .....	31
Demo .....	32
Help.....	33
Point of Interest categories .....	34
Traffic and other TMC Events.....	37
What is NavDesk?.....	38
How do I install NavDesk onto my computer? .....	38
NavDesk Menu .....	40
My Maps.....	41
My Extras .....	44
My Voices .....	45
Unlock Features.....	46
Language.....	46
Help.....	47
Troubleshooting .....	47
For more information.....	48
Online support.....	48
Navman Customer Support.....	48
Speed Limit.....	48
Safety Camera POIs .....	48
Disclaimer.....	48
Schedule 6 - Third party recipient terms and conditions.....	49
Copyright .....	50

# Welcome

---

Thank you for purchasing this Navman. This manual has been prepared to guide you through the operation of your Navman from first set-up through to continuous use. Please read this manual carefully before using your Navman for the first time. Keep this manual in a safe place and use as your first point of reference.

## Important information for using the manual

It is important to understand the terms and typographical conventions used in this manual.




### Formatting

The following kinds of formatting in the text identify special information:

Convention	Type of Information
<b>Bold</b>	Navman components or items displayed on screen, including buttons, headings, field names and options.
<i>Italics</i>	Indicates the name of a screen.

### Icons

The following icons are used throughout this manual:

Icon	Description
	Note
	Tip
	Warning

 
# How do I use the touch screen?

---

## Navigating on the screen

To operate your Navman, touch the screen with your fingertip. You can perform the following actions:

- **Tap**  
Press and release an item displayed on the touch screen.
- **Select**  
Tap an item in a list or tap a command from a menu.

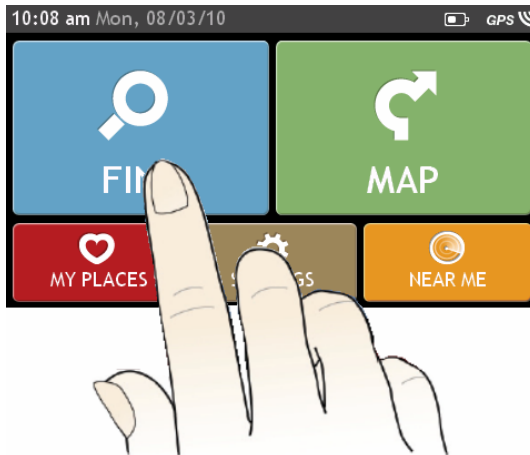

# How do I get started?

---



The first time you use your Navman it may take several minutes to establish a GPS connection.

## How do I turn my Navman on for the first time?

To get started for the first time, complete the following steps:

1. **Read the Important Safety Information**

2. **Position your Navman in your vehicle**

Follow the instructions in the *Quick Start Guide*.

**CAUTION** Ensure that your Navman does not obstruct the driver's view, or interfere with the operation of the vehicle airbags and safety devices.

3. **Turn your Navman on**

Your Navman will turn on and display the *Language* screen.

4. **Select your preferred language**

From the *Select Language* screen, tap your preferred language.

- You can change your preferred language while using your Navman.

5. **Read the warning message**

The *Safety Agreement* screen will display after you have selected your preferred language. Read the Safety Agreement message. To confirm that you have read and understood the message, tap **Accept**.



Due to legal requirements this Agreement must always be selected. It cannot be turned off.

6. **Customise the device**

Follow the onscreen instructions to select your preferred distance unit, date format, and time format.

7. **Unlock your Navman**

Depending on your model, you may need to enter a Product Key (which is printed on the side of the box) and then tap **OK** to unlock the device. You will only have to do this the first time you use your Navman.



It is recommended that you keep a copy of the Product Key in a safe place.

8. **Set up Home**

 
The Home setup wizard only appears on the first time you start your Navman.






- Tap **OK** to set up your home immediately using the address-entry wizard.
- You can tap **Cancel** to skip the wizard, and then select your home later in MY PLACES.

When you have finished the steps above, the *Main Menu* screen will display. If you have a GPS fix, you can start to use Navman to plan your trip.
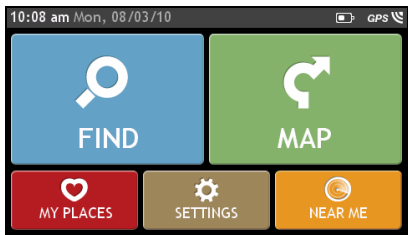
# Main Menu

The Main Menu is your starting point for searching for a destination. The Main Menu also allows you to customise your Navman, view saved locations as My Place/Home, and search for POIs nearby.




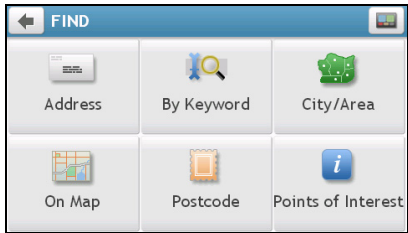 
	Search for places, areas and streets to help plan your route.
	Display the <i>Map</i> screen.
	Access your saved locations.
	Configure your Navman to enhance your navigation experience.
	Search for Points of Interest nearby.



## How do I navigate through the menu screens?


How do I use the BACK button and MAIN MENU button in the title bar?

1. On the *Main Menu* screen, tap the desired menu button to enter the menu screen.

For example, tapping  will lead you to the *FIND* main screen.

 


2. The system provides the BACK button (  ) and MAIN MENU button (  ) in the title bar of the menu screen, which allow you to navigate through the menu screens easily. You can:
  - Return to the previous screen by tapping the BACK button.
  - Return to the Main Menu by tapping the MAIN MENU button.

 In some menu screens, such as the Keyboard screen, the MAIN MENU button will not appear in the title bar. In this instance, you may have to tap the BACK button twice.

How do I use the tabs in the title bar?



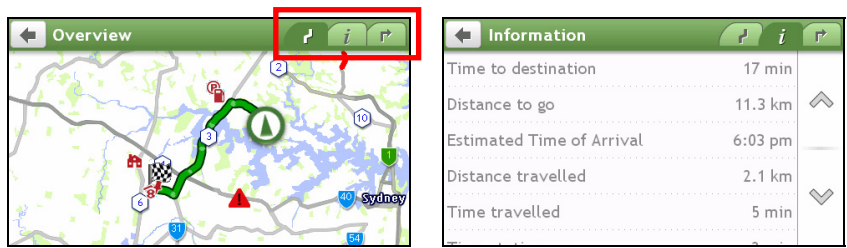


In some menu screens, such as the map *Overview* screen, the system provides the tab buttons that allow you to enter the additional page in the menu screen. Simply tap the desired tab to change the view.




 The selected tab will be highlighted as a darker-colour tab.

# How do I go from A-B?

Your Navman is equipped with maps that provide street-level detail for door-to-door navigation, including Points of Interest such as accommodation, parking areas, petrol stations, railway stations and airports.

When you ...	Then ...
need to search for an address	tap  then select <b>Address</b> to search for the address.
want to search all information on the device - city, streets, named sites, features, landmarks or venues	tap  then select <b>By Keyword</b> .
search for a Point of Interest	tap  then select <b>Points of Interest</b> to search for a POI.
want to navigate to a recently visited location	tap  then select the <b>Recent Locations</b> tab (  ).

 **WARNING** For your safety, enter destination information before you start a journey. Do not enter a destination while driving.


## How do I plan my first trip?

Using your Navman to plan your first trip is easy. There are several ways to select your destination. Complete the following to navigate to a street address that you know using the FIND address wizard.


 This process will require you to enter Suburb, then Street, then Street Number.



→

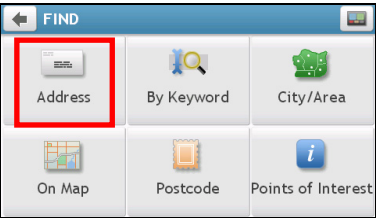


→

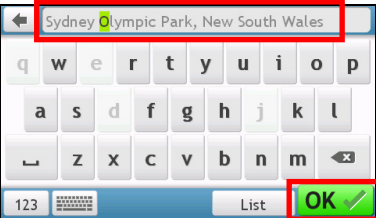


→



→

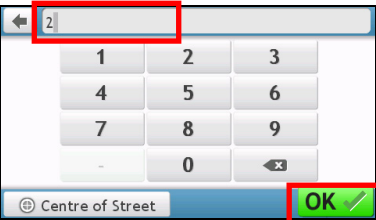



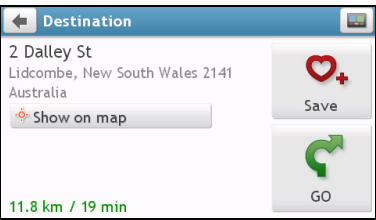

→






Complete the following:

If you want to ...	Then ...
calculate the route and start navigating	<ul style="list-style-type: none"><li>tap  The <i>Map</i> screen will display.</li></ul>
save the location as a favourite	<ul style="list-style-type: none"><li>tap  The location will be saved in My Places immediately.</li></ul>
save the location as Home	<ul style="list-style-type: none"><li>tap  →  The <i>Edit</i> screen will display.</li><li>tap <b>Save as Home</b>.</li></ul>
explore the map	<ul style="list-style-type: none"><li>tap <b>Show on map</b>.</li></ul>



## How do I preview the destination on map?

 
After searching an address (or a POI), you can preview the destination on map to explore the area near the location. On the *Destination* screen, tap the **Show on map** button to display the destination preview map as below.

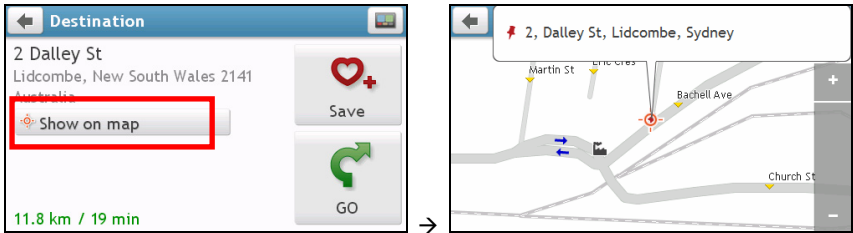

## How do I explore the map?

 On the destination preview map, you can:


- Tap the  /  button to zoom in/out the map.
- View the information of your destination that is shown at the top of the map screen.
- Tap on a street/area/POI to display the related information of the location near your destination.
- The information of the selected street/area/POI near your destination will be displayed with a check mark. Tapping the check mark will bring up the *Destination* screen of the selected location.

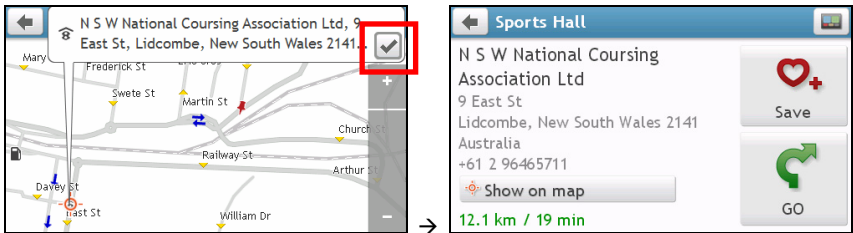 

# How do I view my route?

 
## The driving map



When a route has been calculated, the *Map* screen will display. You will be directed to your destination by spoken and visual instructions.

 The driving map will be displayed automatically when:

- a route is calculated.
- the device is reset and the user is on a route.

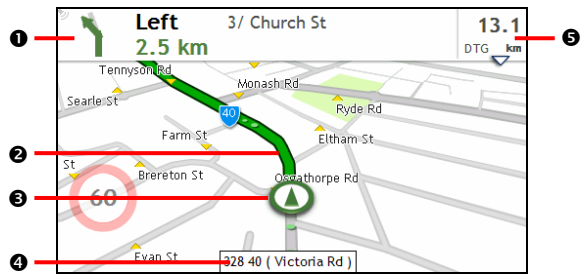
Alternately, you can access the map screen manually by tapping the MAP button on the Main Menu.



	Item	Description
❶	Direction and distance of next turn	The direction and distance to your next turn. <ul style="list-style-type: none"><li>▪ Tap  to repeat the vocal instruction.</li></ul>
❷	Current route	Your current route is highlighted.
❸	Current position	Your current position is marked with  .
❹	Address bar	The current address will be displayed in the text box at the bottom of the map screen.
❺	Distance and time information	Tap to expand and select the following options: <ul style="list-style-type: none"><li>▪ DTG (Distance to Go)</li><li>▪ TTG (Time to Go)</li><li>▪ km/h or mph (speed) and compass heading</li><li>▪ ETA (Estimated Time of Arrival)</li><li>▪ Time</li></ul>


# How do I view my route statistics?

 Tap anywhere on the *Map* screen to bring up the *Map options* screen. Tap the Route button to view the route statistics.

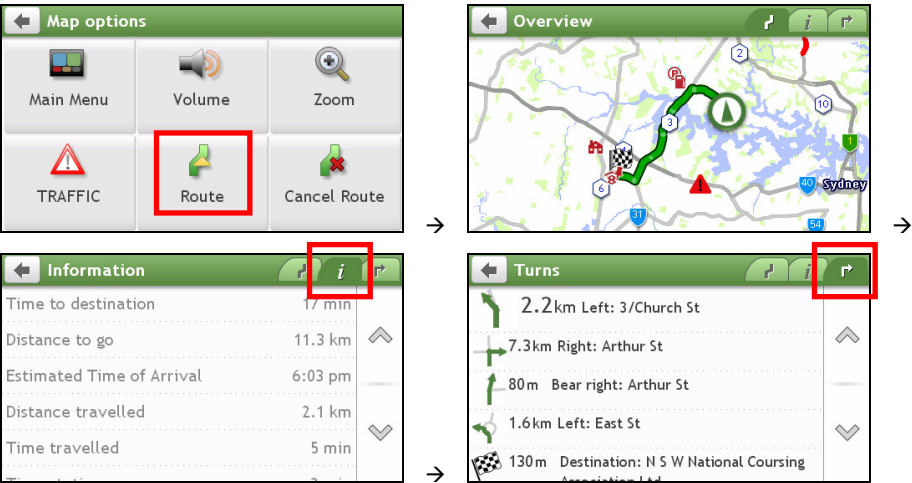


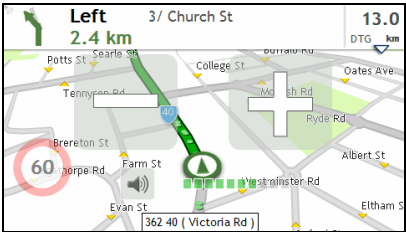 
Your Navman provides information on your:

- distance to go
- estimated time of arrival
- distance travelled
- average speed
- maximum speed
- time taken for trip
- stationary time.






 Tap the tabs in the title bar to view the additional information in the different screens.


# How do I adjust the volume?

From the *Map options* screen, tap  . The volume buttons will be displayed on the map screen in translucent mode.




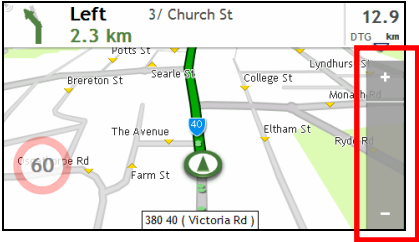 
Complete the following:

If you want to ...	Then ...
increase the volume	tap  <ul style="list-style-type: none"> <li>The volume bar indicates the current volume level.</li> </ul>
decrease the volume	tap  <ul style="list-style-type: none"> <li>The volume bar indicates the current volume level.</li> </ul>
mute or unmute	tap  <ul style="list-style-type: none"> <li>The speaker icon indicates the status:  : muted     : unmuted </li> </ul>



 The volume buttons will automatically disappear after the map is idled for 5 seconds.


## How do I zoom in/out the map?

From the *Map options* screen, tap . The zoom buttons will be displayed on the map screen in translucent mode.



Complete the following:


If you want to ...	Then ...
zoom in the map	tap and hold 
zoom out the map	tap and hold 

 The zoom buttons will automatically disappear after the map is idled for 5 seconds.

## What if I miss a turn?

### Back-On-Track™ Automatic Rerouting

You will be redirected if you make a wrong turn. A message informing you that your route is being re-calculated will display at the top of the screen.

To cancel a route re-calculation, tap  on the *Map options* screen. A warning will display asking you to confirm the cancellation. If confirmed, both the re-calculation and your current route will be cancelled.

## Smart Route

Your Navman features Smart Route, which intelligently anticipates congested roads at peak times so that they can be avoided. Your Navman does this by using historical, anonymised data from millions of fellow drivers. Since Smart Route helps you automatically avoid predicted heavy congestion, you will be able to save time and money during your journeys.

# How do I search for a POI by type?

A POI (Point of Interest) is a named site, feature, landmark or public venue which can be displayed as an icon on the map. POIs are grouped by category, such as petrol stations, parks, beaches and museums.

1. Tap .

2. Tap .




The *POI Menu* screen will display.




3. Complete the following:

 
If you want to ...	Then ...
search for the POIs near your current location	tap <b>Nearby</b> . The <i>POI Type Selection</i> screen will display.
search for the POIs in a specified city or area	<ul style="list-style-type: none"><li>tap <b>In City/Area</b>. The <i>Keyboard</i> screen will display.</li><li>after you have entered a name of a city/area, tap <b>OK</b>. The <i>POI Type Selection</i> screen will display.</li></ul>
search for the POIs on your route	tap <b>Along Route</b> . The <i>POI Type Selection</i> screen will display.
search for the POIs near your destination	tap <b>Near Destination</b> . The <i>POI Type Selection</i> screen will display.

4. Complete the following:



If you want to ...	Then ...
search for POIs by keyword	<ul style="list-style-type: none"><li>tap <b>By Name</b>. The <i>Keyboard</i> screen will display.</li><li>after you have entered a keyword, tap <b>OK</b>. The <i>POI List</i> screen will display.</li></ul>
search for petrol stations	tap  . The <i>POI List</i> screen will display.
search for parking places	tap  . The <i>POI List</i> screen will display.
search for banks and ATMs	tap  . The <i>POI List</i> screen will display.

If you want to ...	Then ...
search for emergency services	tap  . The <i>POI List</i> screen will display.
view more POI types	<ul style="list-style-type: none"> <li>tap <b>By Type</b>. The <i>POI Type List</i> screen will display.</li> <li>select a POI type. The <i>POI List</i> screen will display.</li> </ul>

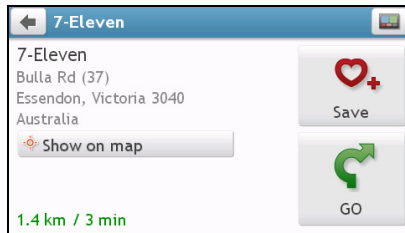5. Tap the desired item from the list.




6. Complete the following:



If you want to ...	Then ...
calculate the route and start navigating	tap  . The <i>Map</i> screen will display.
save the location as a favourite	tap  . The location will be saved in My Places immediately.
view the POI location on the map	tap <b>Show on map</b> . The <i>Preview</i> screen will display.



# How do I search by keyword?

Complete the following to navigate to a POI that you find by keyword.



 Note that this process will search in a spiral from your current/last known position.

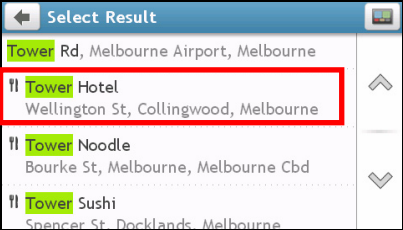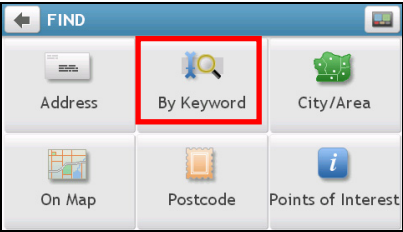Tap .

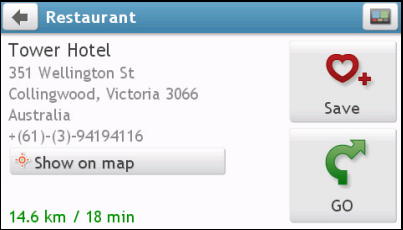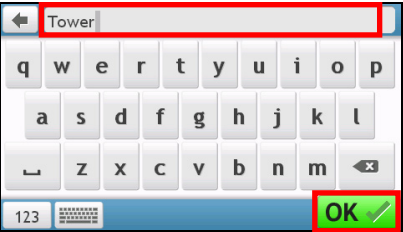



Complete the following:

If you want to ...	Then ...
calculate the route and start navigating	tap  . The <i>Map</i> screen will display.
save the location as a favourite	tap  . The location will be saved in My Places immediately.
view the location on the map	tap <b>Show on map</b> . The <i>Preview</i> screen will display.



# How do I receive current traffic information via TMC?

**Traffic information is available via an optional accessory.**

Your Navman can receive current traffic information for all main roads and motorways, enabling you to avoid potential delays on your route. Event messages and traffic icons will display as they occur. If an event message obscures your current location, the map will adjust to display both the message and your location.

## How does my Navman receive traffic information?

 
Depending on your model, you may receive current traffic information on your Navman using the built-in TMC receiver or via the Navman traffic accessory kit. The traffic accessory kit may be sold separately.

The Traffic Message Channel (TMC) broadcasts real-time traffic information via the FM Radio Data System (RDS). FM radio stations transmit TMC data on a cycle of several minutes, with hundreds of events able to be broadcast to TMC receivers.

You have to pay for TMC service in some models and in some countries.


## How will I know when a Traffic Event occurs?

When travelling through an area in which you can receive traffic updates, your Navman will decode these events and display them on-screen. An icon will display at the event location on the map screens, and an audible warning is given if an event is on your route. Where an event spans a specific distance, the road will be highlighted and arrows will indicate the direction affected.

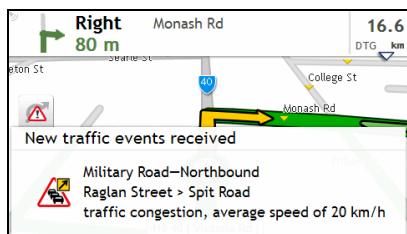


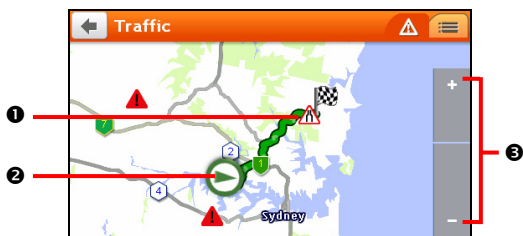 
A message will display at the bottom of the screen with the road name, the section of road affected and the type of event that has occurred. The message remains on screen for 8 seconds and is added to the *Event List*.





## Traffic Overview screen

 Depending on your Navman model, traffic information may not be available, may require a subscription, or may require the Traffic Accessory Kit (may be sold separately).

When you see the traffic event message on your driving map screen, you can open the *Traffic Overview* screen to display a general overview of the traffic situation on your route, including all events in the immediate vicinity.

Tap on the driving map to bring up the *Map options* screen, and then tap .

 



	Item	Description
❶	Event icon	Displays icon to indicate type of event.
❷	Current position	Your current position is marked with  .
❸		To zoom in or out, tap and hold  or  .

**How do I view a list of all events on my route?**

Your Navman creates a list of events as they are received, which is displayed on the *Event List* screen.


From the *Traffic Overview* screen, tap .

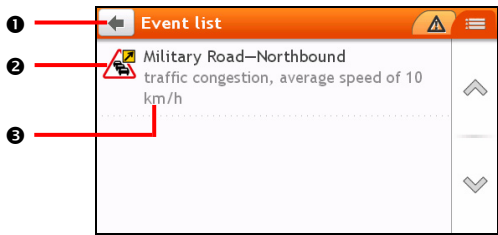

	Item	Description
❶		Tap to return to the previous screen.
❷	Event icon	Displays an icon to indicate type of event.
❸	Event description	Displays details of the Event, including: <ul style="list-style-type: none"><li>▪ Name of road and direction in which Event is taking place.</li><li>▪ Location of where Event begins and ends.<ul style="list-style-type: none"><li>○ &gt; indicates an Event from a location, to a location.</li><li>○ &lt; &gt; indicates an Event between locations.</li></ul></li><li>▪ Type of Event.</li></ul>

How do I view traffic details?

 From the *Event list* screen, tap the event you want to view. The *Event Details* screen will display.

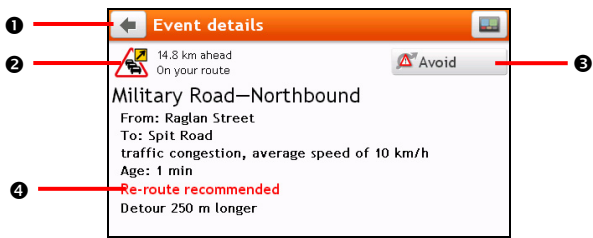

	Item	Description
1		Tap to return to the previous screen.
2	Event icon and description	Displays details of the Event, including: <ul style="list-style-type: none"><li>Name of road and direction in which Event is taking place.</li><li>Location of where Event begins and ends.<ul style="list-style-type: none"><li>&gt; indicates an Event from a location, to a location.</li><li>&lt; &gt; indicates an Event between locations.</li></ul></li><li>Type of Event.</li></ul>
3	Avoid	Tap to initiate a new route to avoid the event. Only available if a detour or re-route is available.  The Unavoid Area button is displayed when a re-route has been calculated.
4	Detour information	Displays details of detour recommendation, if any.

How do I know if a detour is recommended?

When a Traffic or Clearance event occurs on your route, a detour will often be recommended. The detour event message will display in the status bar on map screens.

Detours are only recommended for Traffic or Clearance Events on a calculated route.

How do I avoid an event on my route?

- From the *Event List* screen, tap the event.  
The *Event Details* screen will display.
- If a detour has been calculated to avoid an event on your route, **Avoid** is available; tap to accept the new route and avoid the event.  
The *Map* screen will display.

# Traffic messages

The *Event Details* screen displays detour status information.


## Detour Not Available messages

If a detour is not available, one of the following messages will display:

Message	Description
This Event is not locatable This clearance is not locatable	A specific location for the Event cannot be identified.
This Event does not affect your route This clearance does not affect your route	The Event is not on the current leg of your journey, or is behind your current position.
You are avoiding this Event You have accepted this clearance	The Event is not on the current leg of your journey.
You are too distant to re-route You are too distant to accept this clearance	The Event is currently too distant to affect your journey.
Detour not found Clearance route not found	A detour / re-route could not be calculated.

## Detour Recommended messages

If a detour is recommended, one of the following messages will display:

Message	Description
Finding detour.... Recalculating route.....	Your Navman is calculating a new route. During calculation, the % complete will display.  Exiting this screen before the new route is calculated will cancel the operation.
Detour distance..... Clearance change	A detour has been calculated. The difference between the distance of your current route and the proposed route is displayed.

 
# My Places


---


My Places has all your saved locations.


## How do I save a location as My Place or Home?


1. Search for an address until the *Preview* screen is displayed.

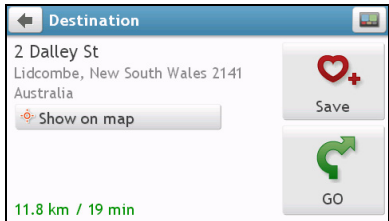

 
2. Tap .  
The *Save* screen will display. The location has been added to My Places.

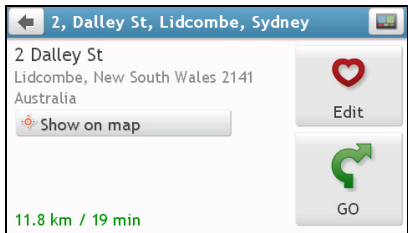


3. To save the location as Home, tap .  
The *Edit* screen will display.


Tap . The location has been set as Home.


## How do I navigate to a location I have saved?

  1. Tap .  
The *My Places* screen will display.

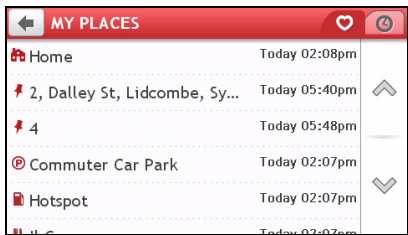

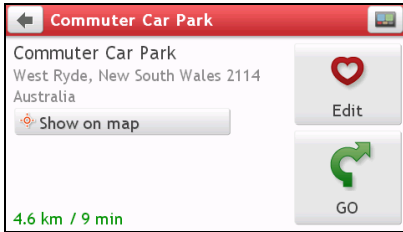

2. Tap the favourite destination you want to travel to.  
The *Preview* screen will display.





3. Tap .  
Your Navman will calculate the route from your current location. The *Map* screen will display.

## How do I navigate to Home?

 If you have not set an address as Home, the first time you try to navigate to Home you will be prompted to search for an address using the address-entry wizard.

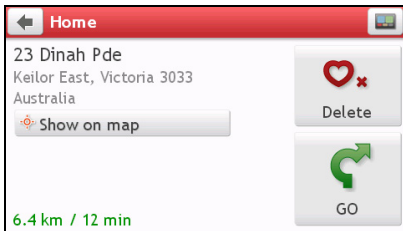

1. Tap .  
The *My Places* screen will display.
2. Tap **Home** (  ).  
The *Preview* screen will display.




3. Tap .  
Your Navman will calculate the route from your current location. The *Map* screen will display.


## How do I navigate to a recent place?

  
To make navigating to an address easier, your Navman will automatically save all your start locations and destinations in a list of recent places.

1. Tap .  
The *My Places* screen will display.
2. Tap .  
The *Recent Locations* screen will display.

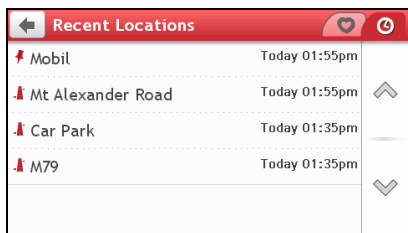

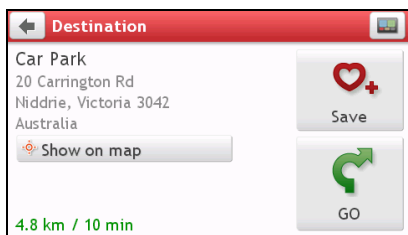


3. Tap a recent place.  
The *Preview* screen will display.






4. Tap .  
Your Navman will calculate the route from your current location. The *Map* screen will display.

## How do I edit the name of a location in *My Places*?

 
1. Tap .  
The *My Places* screen will display.
2. Select a location to edit.  
The *Preview* screen will display.
3. Tap .  
The *Edit* screen will display.
4. Tap .  
The *Keyboard* screen will display.
5. After you have edited the name, tap **OK**.

## How do I delete a saved location?

1. Tap .  
The *My Places* screen will display.
2. Select the location you would like to delete.  
The *Preview* screen will display.
3. Tap .  
The *Edit* screen will display.
4. Tap .  
The location is deleted.

# What is NEAR ME?


NEAR ME services allows you to quickly search the local area for common types of important POIs.

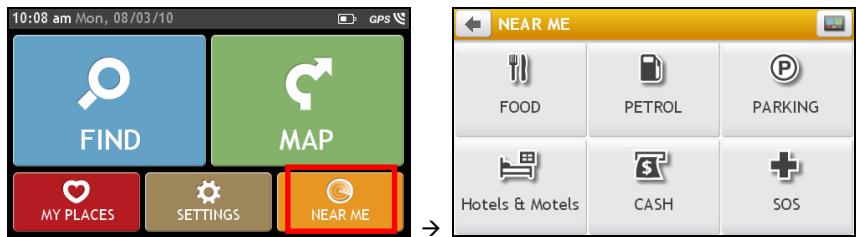



	Search for the nearest restaurants, cafes, fast-food premises and other dining establishments.
	Search for the nearest petrol stations.
	Search for the nearest parking places.
	Search for the nearest hotels and motels.
	Search for the nearest banks and ATMs.
	Search for the nearest emergency services, including hospitals and police.


## How do I search for a POI using NEAR ME?

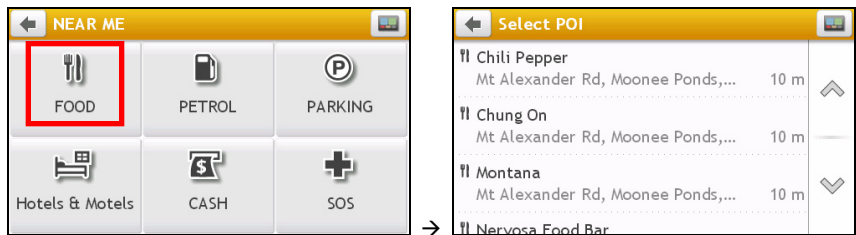  1. Tap
2. Select the desired POI category (for example, FOOD). The search result will be listed in the *Select POI* screen.







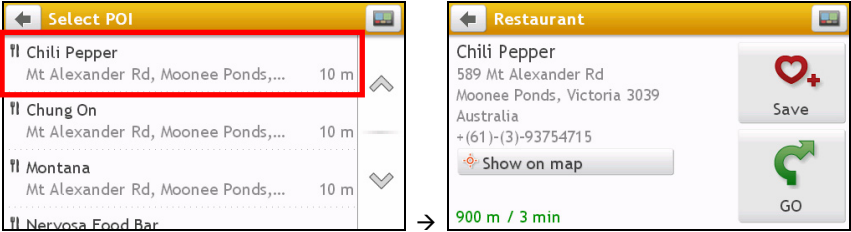

3. Tap  or  to scroll up or down the list. Select the desired item to display the destination screen.




4. Complete the following:


If you want to ...	Then ...
calculate the route, open the <i>Map</i> screen and start navigating	<ul style="list-style-type: none"> <li>tap . The <i>Map</i> screen will display.</li> </ul>
save the location as a favourite	<ul style="list-style-type: none"> <li>tap . The location will be saved in My Places immediately.</li> </ul>
save the location as Home	<ul style="list-style-type: none"> <li>tap  → . The <i>Edit</i> screen will display.</li> <li>tap <b>Save as Home</b>.</li> </ul>
explore the map	<ul style="list-style-type: none"> <li>tap <b>Show on map</b>.</li> </ul>

# What can I customise?

 There are various customisation options available to enhance your navigation experience.

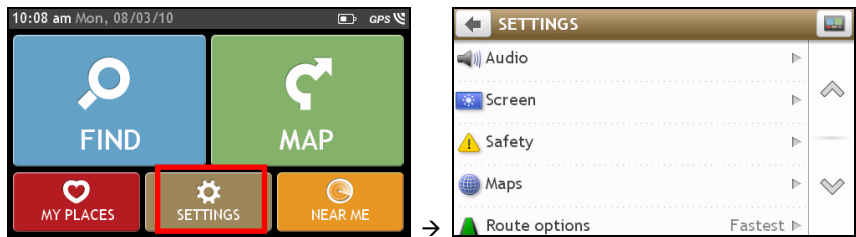

## Audio

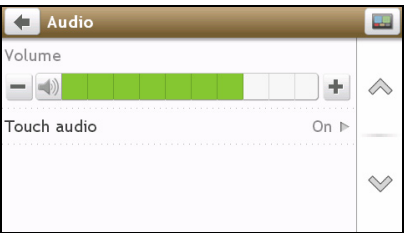 


Complete the following:

If you want to ...	Then ...
increase the volume	tap <ul style="list-style-type: none"> <li>The volume bar indicates the current volume level.</li> </ul>
decrease the volume	tap <ul style="list-style-type: none"> <li>The volume bar indicates the current volume level.</li> </ul>
mute or unmute	tap <ul style="list-style-type: none"> <li>The speaker icon indicates the status:           <div>  : muted     : unmuted         </div> </li> </ul>
hear which letter you have tapped when you tap the touch screen	tap the <b>Touch audio</b> option to turn it <b>On</b> or <b>Off</b> .





 - Your preferences are automatically saved.

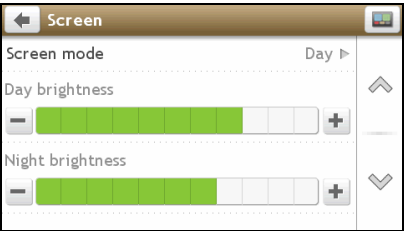You can simply tap on the **Volume** bar so that the volume will be set immediately at the position you tapped.


# Screen



 
Complete the following:

If you want to ...	Then ...
change the displayed screen mode	tap Screen mode and select: <ul style="list-style-type: none"><li>▪ <b>Auto:</b> set to automatically change between Day and Night modes.</li><li>▪ <b>Day:</b> set the screen to be displayed in Day mode.</li><li>▪ <b>Night:</b> set the screen to be displayed in Night mode.</li></ul>
change the screen brightness in day mode	tap  /  on Day brightness bar <ul style="list-style-type: none"><li>▪ The brightness bar indicates the brightness level in day mode.</li></ul> <b>Warning:</b> Your Navman can heat up when the brightness scale is set high, therefore, use lower brightness whenever acceptable.
change the screen brightness in night mode	tap  /  on Night brightness bar <ul style="list-style-type: none"><li>▪ The brightness bar indicates the brightness level in night mode.</li></ul> <b>Warning:</b> Your Navman can heat up when the brightness scale is set high, therefore, use lower brightness whenever acceptable.

- Your preferences are automatically saved.

 You can simply tap on the brightness bar so that the screen brightness will be set immediately at the position you tapped.

# Safety

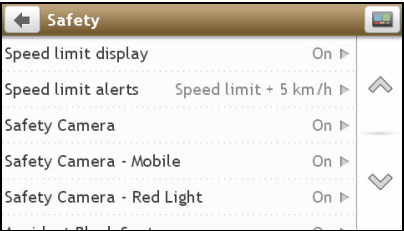

Complete the following:

If you want to ...	Then ...
enable/disable speed limit alerts, which warn you of the speed limit on any given road	<ul style="list-style-type: none"><li>▪ tap the <b>Speed limit display</b> option to turn it <b>On</b> or <b>Off</b>.</li><li>▪ tap <b>Speed limit alerts</b> and select:<ul style="list-style-type: none"><li>○ <b>Off</b>: disable the speed limit alert.</li><li>○ <b>Auto</b>: set the system to alert automatically while your speed is above the limit.</li><li>○ <b>Speed limit + 5 km/h (Speed limit + 3 mph)</b>: set the system to alert while your speed is 5 km/h (3 mph) or more above the limit.</li><li>○ <b>Speed limit + 10 km/h (Speed limit + 7 mph)</b>: set the system to alert while your speed is 10 km/h (7 mph) or more above the limit.</li></ul></li></ul>
set how you want to notified of safety cameras	tap the <b>Safety Camera / Safety Camera – Mobile / Safety Camera – Red Light</b> option to turn it <b>On</b> or <b>Off</b> .

- Your preferences are automatically saved.

## Maps

 


Complete the following:

If you want to ...	Then ...
view the map information	<p>tap <b>Map Version</b> to display a list of all maps, providing the following information:</p> <ul style="list-style-type: none"><li>▪ Name</li><li>▪ Date</li><li>▪ Version/Build number</li><li>▪ Coverage area</li></ul>
change the map colour scheme	tap <b>Map scheme</b> , then select a colour scheme from the list.
select a set of maps to load	tap <b>Map sets</b> , then select your preference from the list.

- Your preferences are automatically saved.

# Route options

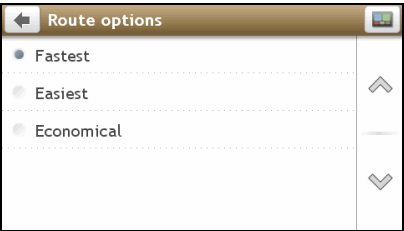

Complete the following:

If you want to ...	Then ...
set route type options for your route	<div>select your route type preference from the list:</div> <ul style="list-style-type: none"><li><b>Fastest</b> – The route that should be the fastest when navigating.</li><li><b>Easiest</b> – The simplest route with the least number of turns and favours motorways where appropriate.</li><li><b>Economical</b> – The route with least number of stops, turns and urban areas which should save on fuel usage.</li></ul>

- Your preferences are automatically saved.

# Language

 


Complete the following:

If you want to ...	Then ...
change the on-screen language	tap <b>Language</b> and select your preferred language from the list.
change the voice scheme	tap <b>Voice</b> and select your preferred voice scheme from the list.

- Your preferences are automatically saved.

# Units

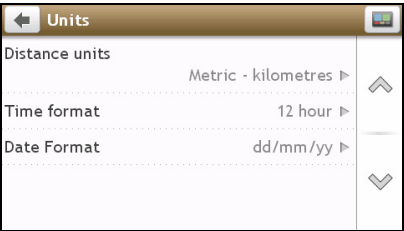


Complete the following:


If you want to ...	Then ...
change the distance units	tap <b>Distance Units</b> and then select your preferred distance unit type.
change the time format	tap <b>Time format</b> and then select your preferred time format.
change the date format	tap <b>Date Format</b> and then select your preferred date format type.


- Your preferences are automatically saved.

# Device

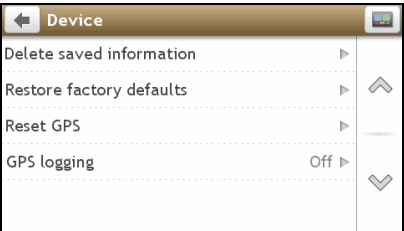 


Complete the following:

If you want to ...	Then ...
delete the saved information in your Navman	tap <b>Delete saved information</b> <ul style="list-style-type: none"><li>▪ Tap <b>Delete My Places</b> and tap <b>Yes</b> when the warning dialog box displays. The data saved in My Places will be deleted.</li><li>▪ Tap <b>Delete recent locations</b> and tap <b>Yes</b> when the warning dialog box displays. The data of recent locations will be deleted.</li></ul>
restore factory default settings	tap <b>Restore factory defaults</b> . When the warning dialog box displays, tap <b>Yes</b> . Your Navman will restart.  The <b>Restore factory defaults</b> option allows you to restore default factory settings but will not delete recent locations or saved My Places destinations.
reset the GPS	tap <b>Reset GPS</b> . When the warning dialog box displays, tap <b>Yes</b> .



If you want to ...	Then ...
	 Occasionally, the GPS fix may need to be reset. This may occur if the receiver has been transported a long distance since last being used; for example, to a different country, and is still trying to establish the previous position.
record a GPS log of your trip	tap the <b>GPS logging</b> option to turn it <b>On</b> or <b>Off</b> .

 - Your preferences are automatically saved.
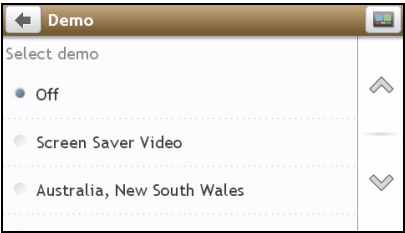
## Demo




Complete the following:

If you want to ...	Then ...
enable a shop demonstration of Navman Spirit to be played	<p>select a demonstration country from the list and tap <b>Start</b>.</p> <p>Tap <b>OK</b>. Your Navman will restart.</p> <p>When your Navman is in Shop demo mode, you will see the navigation demonstration of the pre-defined route without having to set a destination.</p> <p>  You cannot operate your Navman properly in Shop demo mode.         </p>
enable the screen saver feature on your Navman	<p>tap <b>Screen Saver Video</b>.</p> <p>When your Navman is idle for 10/30/60 minutes, the screen saver will display.</p> <p>  The screen saver will only display if your Navman is connected to a power supply.         </p>

- Your preferences are automatically saved.

# Help

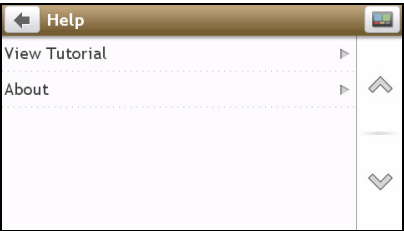 







Tap **About** to display copyright and trademark information.







# Point of Interest categories



Icon	Description	Icon	Description
	Airport		Amusement park
	Art centre		ATM/Cash dispenser
	Bank		Bar/Pub
	Beach		Breakdown service/Car repair facility
	Bowling centre		Business facility or company
	Business office		Bus station
	Camping ground		Car dealer/Automobile dealer
	Casino		Cemetery
	Church		Cinema
	City hall		City, town or village
	Coffee shop		College/University
	Community centre		Commuter railway station
	Courthouse		Dentist
	Doctor		Embassy
	Exhibition centre		Ferry terminal
	Fire Brigade		Golf course
	Government office		Grocery store
	Guest house		Higher education
	Hospital/Polyclinic		Hotel
	Ice skating		Important tourist attraction
	Information/Tourist information office		Library
	Marina/Yacht basin		Medical
	Monument		Motorcycle dealer

Icon	Description	Icon	Description
	Motoring organisation office		Mountain pass
	Museum		Music centre
	Natural attraction		Nightlife
	Park and ride		Parking
	Parking garage		Park/Recreation area
	Performance art/Theater		Petrol station
	Pharmacy		Place of worship
	Police station		Post office
	Public restroom/Toilet facilities		Public sport airport
	Railway crossing		Rental car agency
	Rest area		Restaurant
	Road accident black spot		Scenic/Panoramic views
	School		School zone
	Shop		Shopping
	Ski resort/Ski lift station		Speed check
	Sport centre		Sports hall
	Sports complex		Stadium
	Tennis court		Travel agency
	Transport ferry		Veterinarian
	Winery		Zoo

**Point of Interest categories by subscription**



















Icon	Description
	Safety Cameras
	Safety Camera (Mobile)
	Safety Camera (Average)
	Red Light Camera

**My Places categories**





Icon	Description
	Home
	Saved locations


# Traffic and other TMC Events

Each TMC Event is sorted in to one of nine categories. When an Event is received, one of the following icons will display:

Event	Avoided Event	Message Type	Event Description
		<b>Danger</b>	There is a dangerous situation on the route; for example, people are on the road.
		<b>Traffic</b>	Any event that will cause a delay on a route.
		<b>Weather</b>	Weather conditions are adversely affecting a route; for example, there is ice on the road.
		<b>Warnings</b>	There is a situation of which you should be aware on the route, but it is not serious enough to be considered a dangerous situation; for example, a minor accident has taken place.
		<b>Forecast</b>	An event is expected to occur on a route.
		<b>Restrictions</b>	There is a restricted flow of traffic on a route; for example, a lane has been closed on a motorway.
		<b>Clearance</b>	A traffic event that has now been cleared.
		<b>Information</b>	All other events.
		<b>Roadworks</b>	Roadworks are taking place on a route.

If a *Traffic* or *Clearance* event has a recommended detour, the following icons will display:

Event	Avoided Event	Message Type	Event Description
		<b>Traffic Detour</b>	A <i>Traffic</i> Event, for which a detour is recommended.
		<b>Clearance Re-route</b>	A <i>Clearance</i> Event, for which a re-route is recommended.

 Avoided Event icons will only display on the *Map* screen, at the event location.

# What is NavDesk?

---

NavDesk is a suite of tools you can use to access greater functionality and product information via your computer.


NavDesk allows you to:

- obtain software updates
- manage maps
- manage safety camera subscriptions
- browse the Navman website for special offers.
- register your Navman against theft


Can I use NavDesk with my computer?

Ensure your computer has the following *minimum* system requirements before installing NavDesk:

- IBM compatible PC
- Microsoft® Windows® XP SP2, Vista x32, or Windows 7 only
- Internet Explorer 6 or higher
- DVD drive
- USB port
- Internet connection for activation.

 Microsoft .NET 2.0, 3.0 and 3.5 will be installed on your computer as part of the installation of NavDesk.

## How do I install NavDesk onto my computer?

 **Before you begin:** Ensure that your computer meets the minimum system requirements for NavDesk, especially:

- i. Ensure that *Internet Explorer 6* or higher is installed on you computer before you install NavDesk, even if it is not your default browser.
- ii. Windows XP users, ensure that *Windows XP Service Pack 2* or higher has been applied before you install NavDesk.

 
**CAUTION:** When your Navman is turned on and connected to a computer, it is recognised as an external mass-storage device. Do NOT delete any files that are pre-installed on your Navman. Deleting the files can cause your Navman to crash

1. Close all programs on your computer.
2. Insert the NavDesk Application Installer DVD into your computer DVD drive.  
The NavDesk installer will start.

If your computer does not automatically launch the DVD, start the installation manually:  
**Start → Run.**

Type **D:\Install.exe** where "**D**" is the letter assigned to your DVD drive, then click **OK**.




3. Select your preferred language for NavDesk.
4. Click **Install Software**, then **Install NavDesk**.
5. Follow the screen prompts to install NavDesk:
  - Review and accept the Licence Agreement for NavDesk when prompted.
  - Select a destination folder for NavDesk when prompted.
  - When the installation is complete, click **Finish**.  
NavDesk will open.
6. If prompted to connect your Navman to your computer, complete the following:
  - Plug the large end of the USB cable directly into a USB port on your computer (not a USB hub) and plug the small end into the **USB Socket** (  ) on the bottom of your Navman.



Where possible, plug the USB cable into a USB port at the *back* of your computer.

 - Slide the **Power** switch to the **ON** position, to turn on your Navman.  
The following screen will display on your Navman:

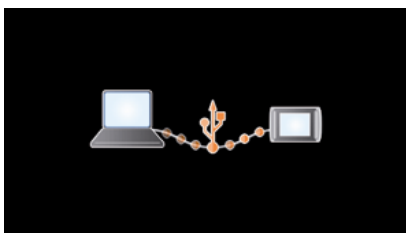

7. If prompted to update your Navman software, follow the on-screen prompts.


You are now ready to use NavDesk to install maps to your Navman.



From now on, you can access NavDesk via: *Start → All Programs → Navman → NavDesk*

# NavDesk Menu

 Depending on your Navman model, certain NavDesk Menu options may not be available.

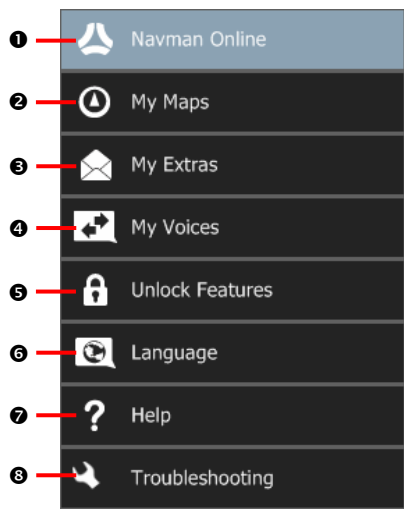


	Component	Description
❶	Navman Online	Display the Navman website, Navman Store and other online features.
❷	My Maps	Install and manage maps.
❸	My Extras	Display available subscription services for your Navman.
❹	My Voices	Install and manage voice files for your Navman.
❺	Unlock Features	Allow you to enter the activation key for the service you purchased.
❻	Language	Change the language for NavDesk.
❼	Help	View useful information for using your Navman.
❽	Troubleshooting	Help you recover your Navman if problems occur during operation.

# My Maps

 My Maps allows you to install new maps, remove maps from your Navman and purchase new maps.

NavDesk → My Maps

Click **View Installed Maps**.

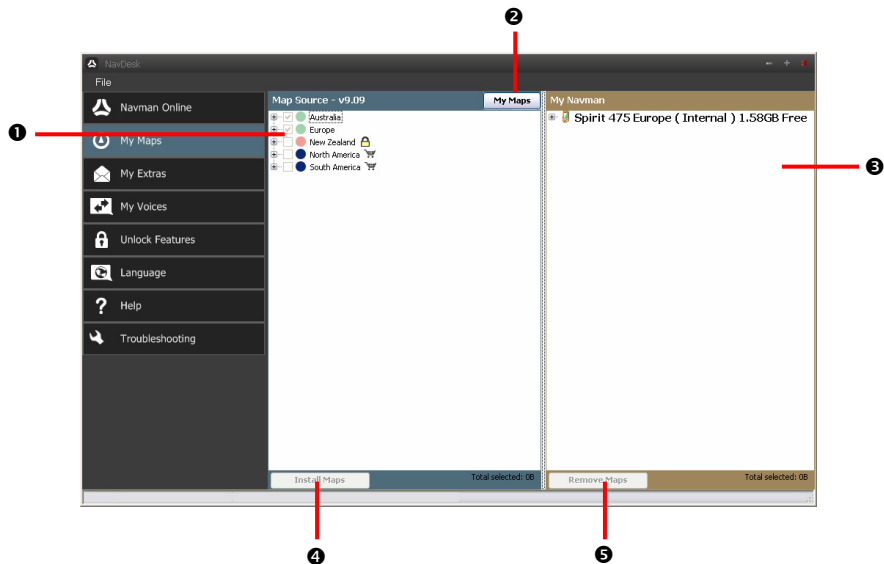


	Component	Description
❶	Map Source	A list of maps on the DVD or available for purchase via the Navman Store website.
❷	Continent	A drop down list of continents that have maps available for your Navman.
❸	My Navman	A list of maps installed on your Navman.
❹	Install map	Click to install the selected map in the Map Source list to you Navman.
❺	Remove map	Click to remove the selected map from your Navman.

Occasionally Navman will offer you free map updates. If a free map update is available and your Navman is connected to your computer, a message will display when you first start NavDesk.

## How do I download a map update immediately?

1. Select the map updates that you would like to download, then click **Download**.
2. Navigate to your *Loadable Maps* location and save the files.

 The default Loadable Maps location is the *My Maps* folder in your *Documents* folder. You can change the location by clicking the **Change Path** button.



## How do I download a map update at a later time?

1. Click **Close** to close the *Free Map Updates* window.
2. When you are ready to download the map update, click **My Maps**.  
A list of available map updates will be displayed under **Free to download** in the **Available Downloads** section.



The Latest Map Guarantee must be used within 30 from the first date you use your Navman.

3. Select the map update that you would like to download, then click **Yes**.
4. Navigate to your *Loadable Maps* location and save the files.



The default Loadable Maps location is the *My Maps* folder in your *Documents* folder. You can change the location by clicking the **Change Path** button.

## How do I install a map update that I have downloaded?

1. Click **My Maps**.  
A list of downloaded map updates will be displayed in the **Loadable Maps** section.
2. Click **Open** next to the map update that you would like to install.  
The globe will display. The free maps that you downloaded are **yellow**.
3. Click the map you want to install to your Navman.  
The map will change colour to a brighter **yellow** to indicate it has been selected.
  - To deselect a map, click the map again.



You may need to install multiple maps to cover the required geographical area.

4. Select the destination media for the selected map, then click **Transfer Now**.  
The selected map will be installed and change colour to **green**.
5. To use your Navman, disconnect the USB cable.



**WARNING:** Do not disconnect the USB cable from the Navman USB Socket until the Globe has refreshed, and the installed map or maps have changed colour to **green**.

## How do I install maps onto my Navman?

Your Navman comes with one or more pre-activated maps.

You can install maps from the DVD that came with your Navman or one that you have purchased separately to a memory card or your Navman internal memory; however you may need to purchase a Map Product Key to activate maps on the DVD that came with your Navman.

1. Open NavDesk, if it is not already open:  
*Start → All Programs → Navman → NavDesk*
2. Click **My Maps**.  
The *My Maps* application will display.
3. Insert a Map DVD into your computer DVD drive.
  - The maps already installed on your Navman are **green**.
  - The maps that are unlocked and ready to be installed to your Navman are **yellow**.
  - The maps that require activation before being installed to your Navman are **red**.
  - The maps that are available for purchase from Navman are **blue**.



If your computer opens Windows Explorer when the DVD is inserted, close the Windows Explorer window.

4. Complete the following:

If the map to be installed is ...	Then ...
yellow	go to step 7.
red	the map needs to be activated via the Internet before it can be installed; continue to step 5.

5. If you connect to the Internet via a dial-up connection, connect to the Internet now.
6. Follow the prompts to activate your Map Product Key, including:
- Enter the Map Product Key when prompted.
  - Your computer will connect to the Internet and activate your Map Product Key.
  - When activation has completed, the map will change colour to **yellow**; continue to step 7.
7. Click the map you want to install to your Navman.  
The map will change colour to a brighter **yellow** to indicate it has been selected.
- To deselect a map, click the map again.



You may need to install multiple maps to cover the required geographical area.

8. Complete the following:

If you want to ...	Then ...
install a <b>yellow</b> map	go back to step 7.
install a <b>red</b> map	the map needs to be activated via the Internet before it can be installed; go back to step 5.
install the selected maps to your Navman	continue to step 9.

9. Select the destination media (Navman internal memory) for the selected maps, then click **Transfer Now**.  
The selected maps will be installed and change colour to **green**.
10. To use your Navman, disconnect the USB cable. You may need to manually reset your Navman.



**WARNING:** Do not disconnect the USB cable from the Navman **USB Socket** until the **Globe** has refreshed, and the installed map or maps have changed colour to **green**.

## How do I remove maps from my Navman?

 
- Click **My Maps**.  
The *My Maps* application will display.
- From the *My Navman* panel, select the check box next to the map you want to remove.
- Click **Remove Maps** to remove the selected maps.
- Confirm that you want to remove the selected map when prompted.  
The map is removed from your Navman.  
You can reinstall these maps at any time via NavDesk.

# My Extras

Subscription information is available in selected models and countries only.

Your Navman contains pre-loaded subscriptions, such as safety camera and travel book information. For the latest subscription updates, visit: [www.navman.com](http://www.navman.com).

NavDesk → My Extras

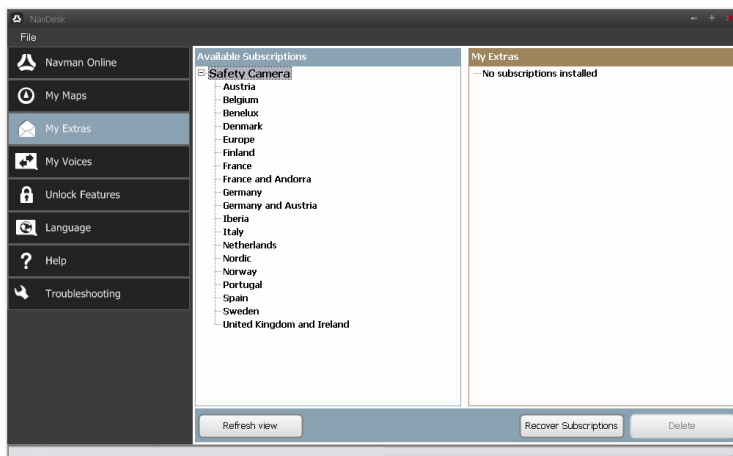

Safety Camera alerts can be set to enable a warning sound or visual warning when on your route.

## How do I purchase a subscription?

1. Select a type of subscription.  
A list of regions will display.
2. Select a region.  
A list of available subscriptions will display.
3. Select a subscription or offer, then click **Purchase an activation key from the Navman store**.  
The Navman Store website will open.
4. Follow the prompts to purchase your subscription.

A product key will be sent to you via email when you have subscribed. You will need to use this product key to activate your subscription.


## How do I activate my subscription?

NavDesk → Unlock Features

1. Enter your product key.
2. Follow the prompts to activate your subscription.

## How do I update subscriptions on my Navman?

 
The My Navman section will display a list of subscriptions already installed on your Navman:

Icon	Description
Red	Expired subscriptions. <ul style="list-style-type: none"><li>▪ right click to purchase a new subscription.</li></ul>
Yellow	Available subscriptions. <ul style="list-style-type: none"><li>▪ right click to update and purchase new subscription.</li></ul>
Green	Active subscriptions. <div> No updates are available for these subscriptions.</div>

## My Voices

My Voices is a NavDesk application that allows you to install or remove voice files.

NavDesk → My Voices

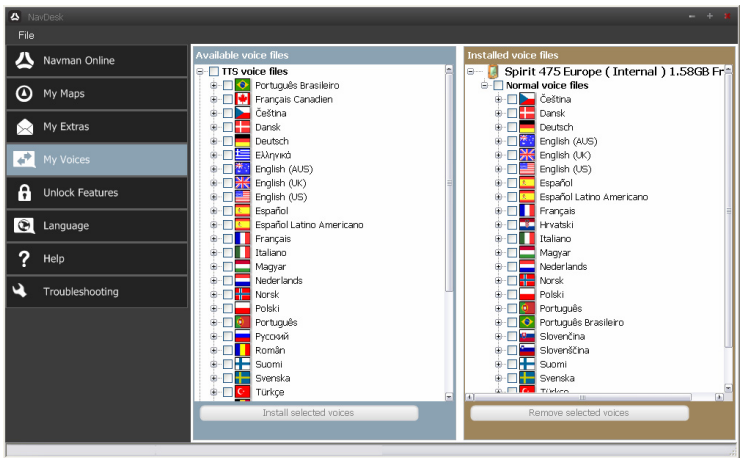

Voice files take up space on your Navman’s internal memory. If you do not use a voice file, you can remove it to free up space. You can later reinstall it to your Navman if required.

### How do I install a voice file?

In the *Available voice files* section, select the voice file you would like to install, then click **Install selected voices**.

 
### How do I remove a voice file?


In the *Installed voice files* section, select the voice file you would like to remove, then click **Remove selected voices**.


# Unlock Features

If you have purchased a map unlock code or subscriptions for your Navman, you have to enter the activation key using the Unlock Features application.

NavDesk → Unlock Features

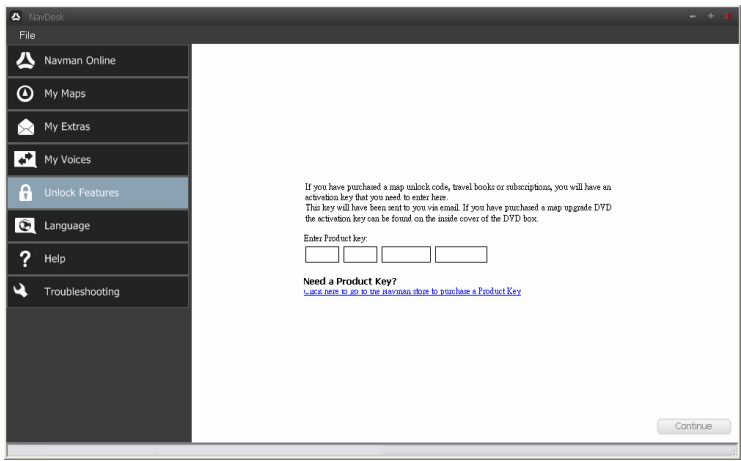


 The activation key will be sent to you by email, or printed on the inside cover of the box if you purchase the map update DVD.

 You can click the link on the screen to purchase an activation key online. Make sure you have an active Internet connection for this feature.

# Language

 You can change the language for NavDesk.


NavDesk → Language

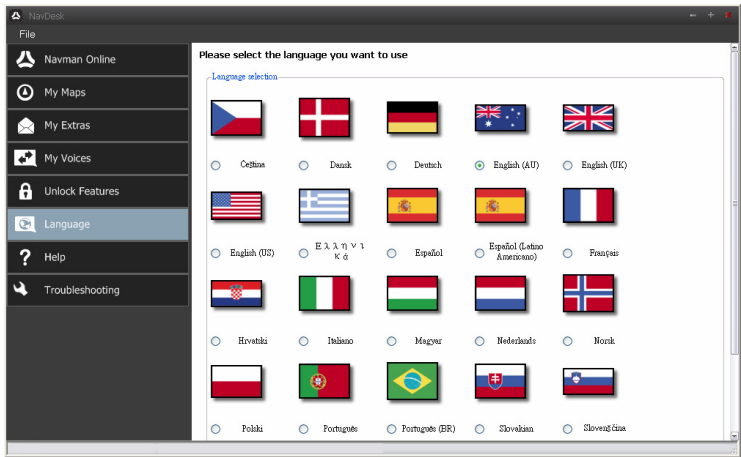

# Help

NavDesk provides you with useful information about using your Navman, including the GPS FAQ, User Manual, and more. Simply click the link button in Help to get the related information.

 NavDesk → Help

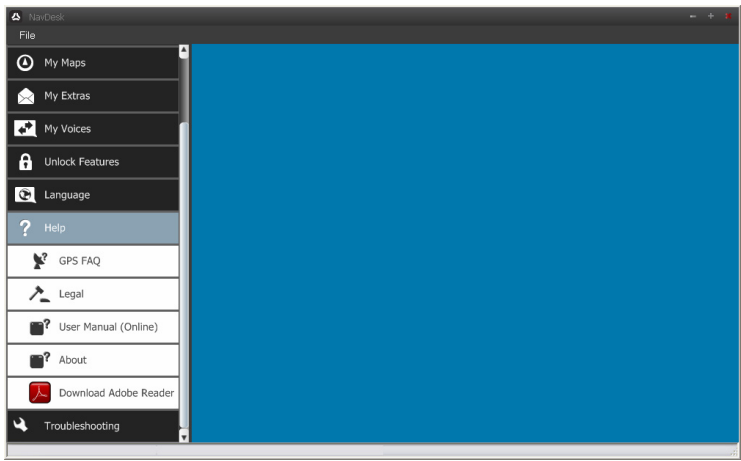


# Troubleshooting

The Troubleshooting menu provides you with the tools for user to fix your Navman if a problem occurs during operation, including:

- Reinstall software on your Navman.
- Recover keys.
- Recover My Extras.

 NavDesk → Troubleshooting

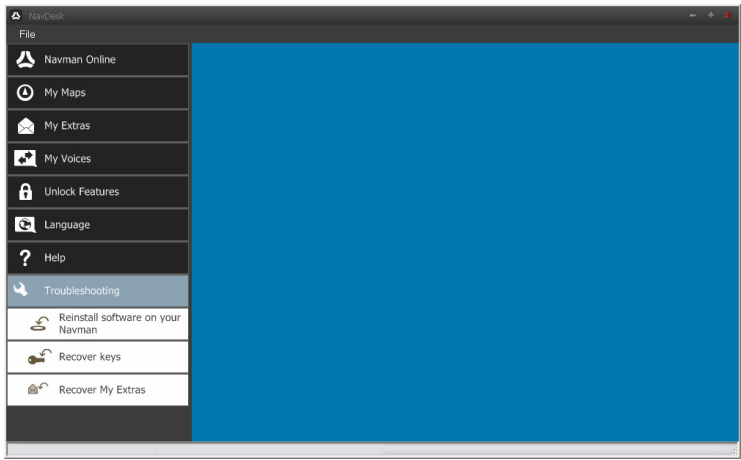

Click the function button in Troubleshooting and then follow the prompts to complete the process.

# For more information

---

## Online support

For 24/7 help and support with Navman products, visit our Technical Support website at: [www.navman.com](http://www.navman.com)

## Navman Customer Support

If you have a faulty product or you would like to speak to a member of our Technical Support team, contact:  
Australia: 1300 NAVMAN (628626), or visit [www.navman.com.au](http://www.navman.com.au).  
New Zealand: 0800 GO NAVMAN (46 628626), or visit [www.navman.co.nz](http://www.navman.co.nz).

## Speed Limit

Navman products are designed to be used as an aid to safer driving. Navman does not condone speeding or any other failure to comply with your local traffic laws. It is your responsibility to drive within the posted speed limit at all times and to drive in a careful manner. Navman accepts NO liability whatsoever for you receiving any speeding fines or points on your license through using this device. Navman does not guarantee the accuracy of the data contained within this database either expressed or implied. In the event you receive a fine or any other penalty for speeding or contravention of any traffic law, or are involved in an accident, Navman is not responsible for any damages of any type. In some countries the data information regarding speed limits may conflict with local law and/or regulations. It is your responsibility to make sure that your use of the data is in compliance with local laws and/or regulations. Usage is at your own risk.

## Safety Camera POIs

Navman products are designed to be used as an aid to safer driving. You can receive messages to alert you to locations of safety cameras, which will enable you to monitor your speed through these areas. Navman does not warrant that all types and locations of safety camera data are available, as cameras may be removed, relocated or new cameras installed. Navman does not condone speeding or any other failure to comply with your local traffic laws. It is your responsibility to drive within the posted speed limit at all times and to drive in a careful manner. Navman accepts NO liability whatsoever for you receiving any speeding fines or points on your license through using this device. Navman does not guarantee the accuracy of the data contained within this database either expressed or implied. In the event you receive a fine or any other penalty for speeding or contravention of any traffic law, or are involved in an accident, Navman is not responsible for any damages of any type. In some countries the data information regarding safety or speed cameras may conflict with local law and/or regulations. It is your responsibility to make sure that your use of the data is in compliance with local laws and/or regulations. Usage is at your own risk.

## Disclaimer

Navman operates a policy of ongoing development. Navman reserves the right to make changes and improvements to any of the products described in this document without prior notice. Navman does not warrant that this document is error-free. The screenshots and other presentations shown in this manual may differ from the actual screens and presentations generated by the actual product. All such differences are minor and the actual product will deliver the described functionality as presented in this User Manual in all material respects.

# Third party recipient terms and conditions

## The Legal Stuff

By activating, using and/or accessing the SUNA Traffic Channel, SUNA Predictive or other content or material provided by Intelomatics (together, **SUNA Products and/or Services**), you must accept certain terms and conditions. The following is a brief summary of the terms and conditions that apply to you. To view the full terms and conditions relevant to your use of the SUNA Products and/or Services, please consult [www.sunattraffic.com.au/termsandconditions/](http://www.sunattraffic.com.au/termsandconditions/).

### 1. Acceptance

By using SUNA Products and/or Services, you will be deemed to have accepted and agreed to be bound by the terms and conditions fully detailed at [www.sunattraffic.com.au/termsandconditions/](http://www.sunattraffic.com.au/termsandconditions/).

### 2. Intellectual Property

SUNA Products and/or Services are for your personal use. You may not record, or retransmit the content, nor use the content in association with any other traffic information or route guidance service or device not approved by Intelomatics. You obtain no right of ownership in any Intellectual Property Rights (including copyright) in the data that is used to provide SUNA Products and/or Services.

### 3. Appropriate Use

SUNA Products and/or Services are intended as an aid to personal motoring, and do not provide comprehensive or accurate information on all occasions. On occasions, you may experience additional delay as a result of using SUNA Products and/or Services. You acknowledge that it is not intended, or suitable, for use in applications where time of arrival or driving directions may impact the safety of the public or yourself.

### 4. Use of SUNA Products and Services while driving

You, and other authorised drivers of the vehicle in which SUNA Products and/or Services are installed and active, remain at all times responsible for observing all relevant laws and codes of safe driving. In particular, you agree to only actively operate SUNA Products and/or Services when the Vehicle is at a complete stop and it is safe to do so.

### 5. Service Continuity and Reception of the SUNA Traffic Channel

We will use reasonable endeavours to provide the SUNA Traffic Channel 24 hours a day, 365 days a year. The SUNA Traffic Channel may occasionally be unavailable for technical reasons or for planned maintenance. We will try to perform maintenance at times when congestion is light. We reserve the right to withdraw SUNA Products and/or Services at any time.

Also, we cannot assure the uninterrupted reception of the SUNA Traffic Channel RDS-TMC signal at any particular location.

### 6. Limitation of Liability

Neither Intelomatics (nor its suppliers or the manufacturer of your device (the "Suppliers")) shall be liable to you or to any third party for any damages either direct, indirect, incidental, consequential or otherwise arising out of the use of or inability to use SUNA Products and/or Services even if Intelomatics or a Supplier has been advised of the possibility of such damages. You also acknowledge that the neither Intelomatics nor any Supplier guarantees nor make any warranties that relate to the availability, accuracy or completeness of SUNA Products and/or Services, and to the extent which it is lawful to do so, both Intelomatics and each Supplier excludes any warranties which might otherwise be implied by any State or Federal legislation in relation to SUNA Products and/or Services.

### 7. Please Note

Great care has been taken in preparing this manual. Constant product development may mean that some information is not entirely up-to-date. The information in this document is subject to change without notice.



## Copyright

© 2010 MiTAC International Corporation. Navman is either a registered trademark or trademark of MiTAC International Corporation and is used under licence by Navman Technology Limited. All rights reserved.

The software contains proprietary information of MiTAC International Corporation; it is provided under a licence agreement containing restrictions on use and disclosure and is also protected by copyright law. Reverse engineering of the software is prohibited.

No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written permission of Navman.

Microsoft, Windows, Windows Vista, Windows 7, and Internet Explorer are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries. All rights reserved.

© 2010 Microsoft Corporation. All rights reserved. Microsoft, MSN, and the MSN logo are trademarks of the Microsoft group of companies.

Location Identifiers © 2010 International Air Transport Association.

POI Data © 2010 InfoUSA.

The software is based in part on the work of the Independent JPEG Group.

All other trademarks and registrations are the property of their respective owners.

Revision: R01  
(07/2010)