



# M60 Series

M60i	★★★
M60B, M60S	★★★★★
M60G	★★★★★

## OPERATION & WIRING MANUAL

All models certified to AS/NZS4601 1999 amendment 1 2003  
M60B/S additionally certified to AS/NZS3749.1 2003 Class B  
M60G additionally certified to AS/NZS3749.1 2003 Class A

These products should be installed according to the  
requirements of the AS/NZS 3749.2 Installation Standard

References to alarm functions and siren responses do not apply to model M60i

# REMOTE CONTROL

2 Supplied

## BUTTON 'TWO' ONLY

### **CH2 OUTPUT**

PRESS FOR 3 SECONDS FOR 'AUXILIARY OUTPUT' (EG: BOOT RELEASE)

## BUTTON 'TWO'

### THEN

## BUTTON 'ONE'

### **SILENT ARM / DISARM**

THIS SEQUENCE WILL SILENTLY ARM OR DIS-ARM THE SYSTEM WITHOUT SIREN CHIRPS.

*ALARM MODELS ONLY*

## BUTTON 'ONE' AND 'TWO' TOGETHER

### **'PANIC'**

PRESS FOR 3 SECONDS TO SOUND THE SIREN OF THE ALARM. PRESS BOTH AGAIN TO CANCEL



## BUTTON 'ONE' ONLY

### **ARM & DISARM**

PRESS FOR 1.0 SECOND TO ARM OR DISARM THE SECURITY SYSTEM - (DOORS WILL ALSO LOCK OR UNLOCK IF THE CENTRAL LOCKING HAS BEEN CONNECTED)

## BUTTON 'ONE' THEN

## BUTTON 'TWO'

### **'SENSOR BYPASS'**

THIS SEQUENCE DEACTIVATES SENSORS SUCH AS THE IMPACT SENSOR, ULTRASONIC'S MODEL). DOORS, BONNET & BOOT REMAIN PROTECTED. *ONLY DEACTIVATE SENSORS TO REDUCE THE POSSIBILITY OF FALSE ALARMS.*

### BATTERY REPLACEMENT

YOUR REMOTE CONTROL USES ONE 12v 23amp BATTERY WHICH IS AVAILABLE FROM YOUR MONGOOSE AGENT OR ELECTRONIC SHOP. CHANGE AT LEAST ONCE A YEAR.

# CONTENTS


Automatic engine immobilisation..	4	Noise pollution control.....	9
Arming.....	5	Indicator flashing.....	10
Open circuit bypass.....	5	Dash mounted warning light...	10
Central locking.....	5	Chirp confirmation.....	10
Disarming.....	6	Panic.....	11
Security re-arm.....	6	Boot release.....	11
Silent arm/disarm .....	6	Programme options.....	11/12
Bonnet, boot & doors.....	6	Remote controls.....	13
2 stage impact sensor (M60B/S/G)	7	Remote code learning.....	13/14
Glass break sensor (M60G).....	7	EMERGENCY OVERRIDE.....	15
Ultrasonic sensors (accessory)....	7	Testing your alarm.....	16
Microwave sensor (accessory)....	8		
Sensor disable.....	8	Wiring & programming	
Intrusion alert.....	8	Warranty terms & conditions	
Battery back-up siren (M60S/G)...	8	Proof of purchase	
Automatic re-set.....	9		
Arm condition memory.....	9		

## **OPERATING YOUR VEHICLE SECURITY SYSTEM**

### **AUTOMATIC 'DUAL CIRCUIT' ENGINE IMMOBILISATION**

The engine will always be automatically immobilised 30 seconds after the ignition has been turned off.

This feature must not be turned off or defeated as it is a Standards or insurance mandatory feature.

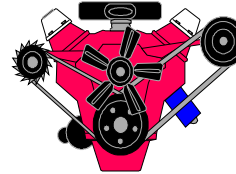

When the ignition is turned OFF, the dashboard LED will start to fast flash for 30 seconds to indicate the automatic sequence has commenced. At the end of the 30 seconds, the siren will chirp once, the indicators will flash once and the dashboard LED will slow flash as confirmation of immobilisation. Only the engine is immobilised - the alarm system is not yet armed.

If an attempt is then made to start the engine whilst immobilised, the siren will chirp.

### **ONCE IMMOBILISED, PRESS BUTTON ONE TO PERMIT ENGINE STARTING**

NOTE: If the system is fully armed by pressing the remote button, the engine is immobilised immediately and any attempt to start the engine will cause the siren to sound fully.

The installer of this system will immobilise two of the following possible circuits to prevent engine starting (a third immobiliser may be added as an option extra);

- Starter motor
- Ignition system
- Electric fuel pump
- Other engine controlling circuit

## **ARMING**

### **NORMAL OPERATION**

- ❑ Turn the engine off, close all windows and remove the keys from the ignition
- ❑ Exit the vehicle and close all the doors (& bonnet & boot).
- ❑ Press button **one** on the remote control.  
The indicators flash once and the siren will chirp once to indicate that the system is armed.  
The dash board warning light, LED, will slow flash to indicate the system is armed.
- ❑ If your vehicle has central locking and it has been connected to this security system, the doors will lock at the same time as arming.

NOTE: If the engine is automatically immobilised (occurs 30 seconds after ignition OFF) before you had a chance to arm the system, press button one twice – once to turn off just the immobiliser and the second time to fully arm and immobilise the system. The system can be programmed to arm automatically 30 seconds after the last door is closed. See page 12.

### **OPEN CIRCUIT BYPASS**

If any door, the bonnet or boot is left open upon arming, the siren will chirp once to signify the system is armed and then sound briefly to inform you a circuit is still open. If ignored, that circuit will not be protected. The open circuit (a door, the bonnet or boot) will automatically arm itself upon closure.

### **CENTRAL LOCKING - additional parts, at extra cost, may be required depending on vehicle equipment level.**

This security system has built-in relays to operate a vehicles' existing central locking system by remote control. When connected, the doors will lock or unlock at the same time as arming or disarming.

### **SENSOR DISABLE**

To turn off any sensors fitted, but arm the bonnet, boot and doors and immobilise the engine, press button one followed by button two. See page 8 for full description.

## **DISARMING**

- ❑ Press button **one** on the remote control to disarm the system.  
The siren will chirp twice and the indicators will flash twice to indicate disarming.
- ❑ The doors will unlock if the vehicles' central locking is connected to the security system.
- ❑ If a door is not opened within 30 seconds, the system will automatically re-arm (& re-lock if connected to your central locking) . See below.

### **AUTOMATIC SECURITY RE-ARM**

The alarm will automatically fully re-arm (and re-lock the doors if connected) if it has been disarmed by remote but a door has not been opened within 30 seconds. The lights flash once as confirmation of re-arming. This feature cannot be turned off.

If a door, bonnet or boot is opened after disarming, the alarm will not re-arm and the doors will not re-lock. However, the engine will re-immobilise if the ignition is not turned ON within 30 seconds.

### **SILENT ARM / DISARM (no siren chirps)**

Press button **two** followed by button **one** within 2 seconds to silently arm or disarm the system.

The chirps may be permanently turned off via the programming options – see your installer.

## **SECURITY PROTECTION**

### **IGNITION, BONNET, BOOT & DOORS**

When armed, the siren will sound and the indicators will flash for 30 seconds when any of these are triggered. If a door, the bonnet or boot is left open, the siren will cycle 90 seconds (3 x 30 seconds) and the indicators will flash.

(If programmed for NSW, the siren will sound for 30 seconds once only)

The system does require your vehicle to be fitted with courtesy light door switches for these to trigger the alarm. Fitting or replacing door switches will incur additional charges.

## **2 STAGE IMPACT SENSOR (MODEL M60B/S/G)**

This sensor is designed to detect impact to the vehicle such as to the bodywork or glass. It should not be triggered by normal wind, or rocking motions.

- If the sensor detects a light impact, the siren will sound a few warning chirps.
- If the sensor detects a heavier impact, the analyser circuit will determine this and sound the siren for 30 seconds and flash the lights.

The sensitivity level is set by the installer and should be at its optimum. Avoid over sensitivity as people nearby may not respond due to too many false alarms. (This type of sensor may not prevent wheel theft, we therefore advise the fitment of locking wheel nuts)

## **GLASS BREAK SENSOR (MODEL M60G)**

This sensor is designed to trigger the alarm by detecting the sound of actual glass breakage. The sensitivity level is set by the installer and should be at its optimum.

## **ULTRASONIC SENSOR (optional)**

The ultrasonic sensor fill the interior of your vehicle with high frequency sound and is designed to trigger the alarm when the interior environment changes. Possible changes are the breaking or removal of glass, a door being opened, or even strong wind through a slightly open window.


For the ultrasonic sensor to operate correctly ensure all doors and windows are closed when arming the alarm system. (False alarms are generally created by open windows or even strong wind through the air vents)

Due to the efficiency of this type of sensor, we advise that you do not leave people or animals inside the vehicle as any movement will trigger the alarm. Should you need to leave people or animals inside, follow the instructions for 'sensor disable by remote' to avoid the alarm being triggered.

Ultrasonic's are not recommended for soft top vehicles or vehicles where air movement is likely within the vehicle.

### **MICROWAVE SENSOR (optional)**

The microwave sensor is designed to trigger the alarm when a microwave field registers physical movement. 2 fields are generated, one outside the vehicle to give perimeter protection, and one inside to give interior protection. Intrusion into the perimeter area chirps the siren as a warning, whilst intrusion into the interior fully sounds the siren. The fields are adjustable for size and should have been set by the installer at their optimum. It is advisable to limit the exterior field to about the width of the door mirrors and the interior to approximately  $\frac{3}{4}$  of the vehicle width. Do not leave people or animals inside the vehicle as any movement will trigger the alarm. Should you need to leave people or animals inside when arming, follow the instructions for 'sensor disable by remote'.

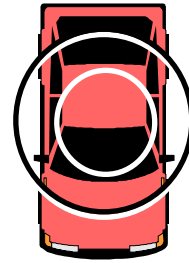

Note: As the microwave produces circular protective fields, some areas of the vehicle may not be protected.

### **SENSOR DISABLE BY REMOTE (ALARM MODELS ONLY)**

There are times when you may wish to deactivate the supplied sensors (impact, ultrasonic or microwave – depending on model of alarm or fitted accessories) to prevent false alarms.

To turn these sensors off, but arm the bonnet, boot and doors and immobilise the engine, press button one to arm the system and within 3 seconds, button two. You will hear the siren chirp for arming followed by three tones indicating the sensors are turned off for this time only.

To disable the sensors at some later time after arming, press the 2<sup>nd</sup> button three times quickly.

If the alarm is sounding and has been triggered by a sensor, pressing the 2<sup>nd</sup> button disables the sensor from further detections.

### **INTRUSION ALERT**

When disarming, if the siren chirps 4 times and the indicators flash 3 times you know the system has been triggered. Refer to the LED flash codes on page 10 to show which circuit has been triggered.



**BATTERY BACK-UP SIREN (M60S/G – optional on other models)**

Vehicle battery disconnection, or cutting the siren wires, will cause the battery back-up siren to sound independently of an alarm trigger. The siren can be turned off with the special keys provided or whenever the car battery needs attention or changing.

Please check that the siren has been mounted in such a position so as to avoid water ingress or heat damage. If washing the engine bay, cover the siren with a plastic bag to prevent water damage. Heat or water damage is not covered by the warranty.

**AUTOMATIC RE-SET**

Upon an intrusion (ie; door opened and closed), the siren will sound for 30 seconds, after which it will stop and reset to the armed position. It will then re-trigger on the next intrusion.

If a door is left open, the siren will sound for 3 x 30 seconds and then that circuit will be bypassed to avoid unnecessary noise.

(If programmed for NSW, only sounding occurs - must be manually re-set after first trigger)

**ARM CONDITION MEMORY**

Should the vehicle battery be disconnected, the system memorises the last set position of the alarm. If the alarm was disarmed prior to battery disconnection, reconnection does not cause the alarm to sound. If the battery was disconnected whilst the system was armed, reconnection will return the system to the armed state.

**NOISE POLLUTION CONTROL**

To reduce noise nuisance and possible false alarms, the system will isolate an individual circuit if it is triggered three times in succession or is left open.

(Eg: 3 x bonnet/boot, 3 x doors, 3 x ignition, 3 x sensor)

Reset by remote by disarming and then re-arming, or by turning the ignition 'on' then 'off'.

### INDICATOR FLASHING (FUSE PROTECTED)

When the siren sounds, the indicators flash simultaneously.  
The indicators will also flash on arming and disarming the system.

- a) 1 Flash - Armed.
- b) 2 Flash - Disarmed.
- c) 3 Flash - Disarmed and previously triggered.



### DASH MOUNTED WARNING LIGHT – LED

The LED shows the status of the alarm, intrusion and any open circuit when arming.

Turning the ignition 'on' resets the flash codes.

- a) Fast flashing - 30 second countdown of automatic functions.
- b) Slow flashing - system armed.
- c) LED off - system off.
- d) On permanently - in remote code learning mode
- e) 1 flash - bonnet or boot has been opened.
- f) 2 flash - sensor has been triggered.
- g) 3 flash - a door has been opened.
- h) 4 flash - an engine start was attempted.



### CHIRP CONFIRMATION & CODES

- a) 1 Chirp - Armed.
- b) 1 Chirp/short siren - indicates an open circuit when arming.
- c) 2 Chirps - Disarmed.
- d) 4 Chirps - Disarmed and indicates that the alarm has been triggered.
- e) Continual chirps - Ignition has been turned on when the engine is immobilised

**PANIC BY REMOTE (in either armed or disarmed state)**

In the event of personal attack, or you suspect that your vehicle is being tampered with, the alarm can be 'panicked' by pressing buttons one and two at the same time on the remote for more than 3 seconds. The siren will sound and the indicators will flash. Pressing the buttons again cancels panic.

**BOOT RELEASE (AUXILIARY OUTPUT) – OPTIONAL CONNECTION**

The system provides an output which may be optionally connected to control a vehicle's electric boot release (if the vehicle is equipped). This may incur additional charges depending on the vehicle specification.

To activate;

- Press button two on the remote for 3 seconds and the boot will unlock and open
- The boot trigger circuit and any interior sensor will be bypassed
- Upon closing the boot the bypassed circuits will re-arm automatically

**PROGRAMMABLE OPTIONS**

The system can be programmed to enable or disable certain features.

These can only be changed by your installer:-

	FACTORY DEFAULT
<input type="checkbox"/> Automatic (passive) arming	OFF
<input type="checkbox"/> Ignition safety door lock	OFF
<input type="checkbox"/> Chirps on (can be momentarily turned off by remote)	ON
<input type="checkbox"/> NSW siren timing (mandatory in NSW)	OFF
<input type="checkbox"/> Turbo interface function	OFF

## **PROGRAMME OPTIONS EXPLAINED**

### **AUTOMATIC (LAST DOOR) ARMING - PROGRAMMABLE**

This feature is factory set in the 'off' position. You may have this programmed 'on' for added security. The alarm will arm automatically 30 seconds after the last door is closed.

- The doors will not lock so that keys cannot be locked inside
- If the engine immobilises prior to the opening and closing of a door, this feature is bypassed. Press button one to unset the immobiliser and press again to arm the system.
- The opening of a door, bonnet or boot during the 30 seconds will suspend the countdown and recommence on closure.

### **IGNITION SAFETY DOOR LOCK - PROGRAMMABLE**

If the system has been connected to a vehicles' central locking, the doors will lock 3 seconds after the ignition is switched 'on' and unlock when the ignition is turned 'off'.

If a door is left open for more than 3 seconds after the ignition has been turned on the safety door lock feature will be inoperative.

### **SIREN CHIRPS - PROGRAMMABLE**

The chirps can be permanently turned off. Only the indicators confirm the arming and disarming.

### **NSW SIREN TIMING – PROGRAMMABLE**

It is a mandatory requirement in New South Wales, Australia, for vehicle alarm systems to sound the siren for one trigger cycle of 30 seconds only. With this feature turned on, the indicators will flash for any subsequent trigger.

### **TURBO INTERFACE FUNCTION – PROGRAMMABLE (not applicable to all models)**

This allows an engine to remain running from a turbo timer so you can arm the bonnet, boot & doors (and lock the doors if connected to central locking). When the turbo timer stops, the immobilisers become active after a 10 second delay and any connected sensor becomes active. An intrusion through the doors whilst the engine is running will sound the alarm and immediately immobilise the engine.

## **ROLLING CODE REMOTE CONTROLS**

Two remote controls are supplied with the system which enable you to arm and disarm your security system.

One remote control should be kept with your car keys and the other with your spare car keys in a safe place. We do not recommend leaving the spare remote and car keys in the vehicle.

The remote security code of your alarm system changes each time you press the remote button. This coding system is referred to as Rolling Code and is completely random therefore eliminating the possibility of anyone recording it (code grabbing).

As there are billions of code combinations the chances of duplication are literally billions to one. Additional remote controls may be added as the alarm module can memorise up to four remote controls.

The batteries in the remote controls should be changed when you notice any of the following;

- System does not respond to the remote signal
- Operation is intermittent
- Reduced operating range – less than 5 metres
- The LED fails to light

Replace annually with a 12v 23A alkaline battery.

## **REMOTE 'CODE LEARNING'**

The main alarm module has a learning capacity to memorise up to four remote controls.

If you wish to add further remotes, or a remote has to be replaced, the new remote needs to be code learnt into the main module. If for instance you have lost a remote and are fearful that someone may try to use it, the lost remote can be deleted from memory so it cannot be used.

An irregular or interruption to the vehicle's power supply may cause loss of remote memory. If your alarm fails to respond to the remote try re-learning them or see your Mongoose dealer.

**REMOTE 'CODE LEARNING': To learn a remote or additional remote:**

- Disarm the system
- Open the drivers door and leave open
- Turn the ignition ON/OFF 3 times (ignition remains off)
- The siren will chirp 3 times, the indicators will flash 3 times and the dashboard LED will light permanently to confirm you have entered remote code learning mode.
- Press button one on the first remote – siren will chirp once as confirmation of reception
- Press button one on the second remote – siren will chirp twice as confirmation of reception
- Repeat for up to four remotes (siren will chirp 3 times for the third and 4 times for the fourth)
- Leave the system for 10 seconds and the learning mode is completed. This is confirmed by three fast chirps and light flashes.

***NOTE: When learning a new replacement or additional remote, the original remote(s) must be re-learnt or they will be erased from memory and will not operate this system.***

**To delete a lost remote from memory:**

Enter learning mode as detailed above. Memorise existing remote once. The lost remote is now deleted. When a replacement is obtained, learn both the existing and new remotes into memory as detailed above.

## **EMERGENCY OVERRIDE – 4 DIGIT PIN CODED**

The system can be disarmed by entering your the unique 4 digit PIN code shown on the 'PIN Code Card' issued with this product.

**KEEP THE CARD IN A SAFE PLACE – NOT IN THE VEHICLE !**

**MONGOOSE *EMERGENCY***  
4 DIGIT PIN CODE OVERRIDE

**PIN CODE:**

PLEASE KEEP THIS CARD IN A SAFE PLACE  
BUT BE READILY AVAILABLE SHOULD YOU  
NEED TO USE THE OVERRIDE PROCEDURE  
**DO NOT LOSE THIS CARD**

Following is an example using PIN code **4525**

The code is entered by turning the ignition ON or OFF in sequence with the dash mounted LED.

- 1) **Ignition ON** - LED will light permanently to commence override.
- 2) **Ignition OFF** - LED will start flashing. Count the number of flashes for the first number.
- 3) **Ignition ON** - after 4 flashes (1<sup>st</sup> number of the example). The LED will light.
- 4) **Ignition OFF** - count the number of flashes.
- 5) **Ignition ON** - after 5 flashes (2<sup>nd</sup> number). The LED will light.
- 6) **Ignition OFF** - count the number of flashes.
- 7) **Ignition ON** - after 2 flashes (3<sup>rd</sup> number). The LED will light.
- 8) **Ignition OFF** - count the number of flashes.
- 9) **Ignition ON** - after 5 flashes (4<sup>th</sup> number).
- 10) **The system will now disarm and the vehicle can be started.**

Note: If your PIN code contains a "0", this equals '10'.

Should you miss the LED flashes or enter a digit incorrectly, wait for 11 flashes and simply repeat the procedure from step 1).

This system will always automatically immobilise the engine every time the ignition is turned off. This override sequence will have to be used to start the engine if your remote controls are not available or inoperative.

## **TESTING YOUR ALARM**

We strongly recommend that you test your alarm frequently.


- 1) Without disarming the system, unlock and open a door with the ignition key - the alarm should sound, excluding model M60i. Check all other doors, bonnet and boot by the same procedure.
- 2) Check the impact sensor, M60B/S/G, by giving the vehicle varying degrees of impact - be careful to do this on areas of the vehicle not likely to be damaged by impact. Light impacts should chirp the siren whilst heavier impacts should fully sound the siren.
- 3) Check the glass break sensor, M60G, by tapping the glass with a 50 cent coin. Varying degrees of tapping should be tried to see the level of sensitivity. Be careful not to break the glass.
- 4) Enter the vehicle and shut all doors, arm the system by remote and try to start the engine to test the engine immobiliser - it should not start and the siren (if fitted) should sound.
- 5) To test the optional ultrasonic sensors, if fitted, enter the vehicle, shut all doors and windows, arm the system and allow it to stabilise for 10~20 seconds. Now wave or clap your hands – the alarm should sound.
- 6) To test the optional microwave sensor, if fitted, arm the system and wait at least 10~20 seconds for the sensor to stabilise. Moving a hand over the outside of side windows should chirp the siren.  
To test the perimeter field size, repeat this movement on the outside of all glass areas.  
To test the interior, leave a window open when arming and reach in and wave an arm around - the siren should fully sound.



**WIRING INFORMATION: Installation to be carried out by suitably qualified persons.**

**MAIN MODULE** The wires are printed for the function:

- |           |               |  |
|-----------|---------------|--|
| 1)        | - TRIG        | (-) BONNET & BOOT TRIGGER INPUT                          |
| 2)        | CH2           | (-) CH 2 OUTPUT – EG: BOOT RELEASE                       |
| 3)        | IGN           | (+) 12v IGNITION INPUT                                   |
| 4)        | GND ARM       | GROUND WHEN ARMED  |
| 5)        | DOOR          | (-) DOOR TRIGGER – jumper changes polarity               |
| 6)        | NO CONNECTION |  |
| 10)       | FLASHER       | (+) INDICATOR OUTPUT – 8 amp cont' max                   |
| 11)       | 12V           | (+) CONSTANT 12v POWER SUPPLY                            |
| 12)       | FLASHER       | (+) INDICATOR OUTPUT – 8 amp cont' max                   |
| 13) & 14) | GND           | (-) 2 GROUNDS – DO NOT JOIN TOGETHER AT THE SAME POINT   |
| 15)       | SIREN         | (+) SIREN OR HORN OUTPUT                                 |
| 7)        | PURPLE        | LOCK – NO  |
| 8)        | ORANGE        | UNLOCK – NO  |
| 9)        | BLUE          | UNLOCK – COMMON  |
| 16)       | WHITE         | LOCK - NC  |
| 17)       | BROWN         | UNLOCK - NC  |
| 18)       | GREEN         | LOCK - COMMON NOT USED                                   |
|           | IM01          | IMMOBILISER CIRCUIT #1 – PAIRED WIRES – max 10amp cont'  |
|           | IM02          | IMMOBILISER CIRCUIT #2 – PAIRED WIRES – max 10 amp cont' |


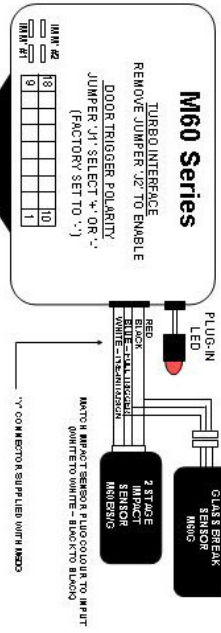


- 1 - TRIG (BONNET & BOOT TRIGGER INPUT)
  - 2 - CH2 (CH2 OUTPUT - eg boot release)
  - 3 - IGN (+ IGNITION INPUT)
  - 4 - GND ARM (. GROUND WHEN ARMED OUTPUT)
  - 5 - DOOR (- DOOR TRIGGER - Jumper change + polarity)
  - 6 - NO CONNECTION
  - 7 - PURPLE . LOCK - NO
  - 8 - ORANGE . UNLOCK - NO
  - 9 - BLUE . UNLOCK - COMMON
  - 10 - FLASHER (+ INDICATOR OUTPUT)
  - 11 - 12V (+12V INPUT, CONSTANT)
  - 12 - FLASHER (+ INDICATOR OUTPUT)
  - 13 - GND (. GROUND)
  - 14 - GND (. GROUND)
  - 15 - SIREN (+ SIREN OUTPUT)
  - 16 - WHITE . LOCK - NC
  - 17 - BROWN . UNLOCK - NC
  - 18 - GREEN . LOCK - COMMON
- IM01 x 2 (IMMOBILISER CIRCUIT NO 1)  
 IM02 x 2 (IMMOBILISER CIRCUIT NO 2)

**ALL WIRE IDENTIFIERS  
 MUST BE REMOVED**  
 CENTRAL LOCKING WIRES  
 ARE COLOUR CODED






**WIRING**

**SIREN / BONNET LOOM – BULLET CONNECTED**  
**ALL BLACK WIRING – PRINTED WITH FUNCTION**

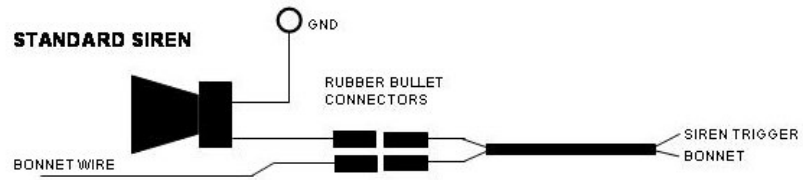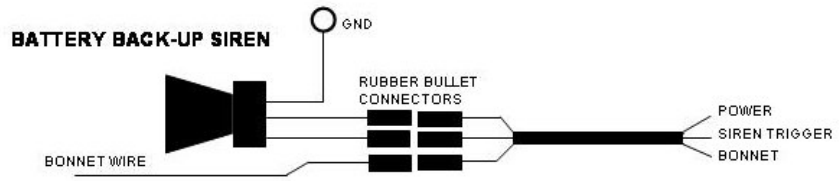

\_\_\_\_\_

# CENTRAL LOCKING CONNECTION OPTIONS

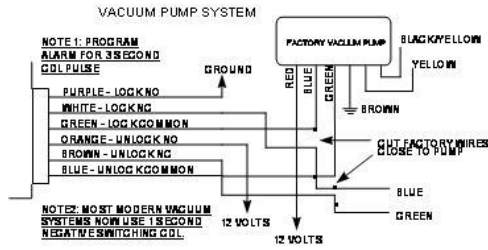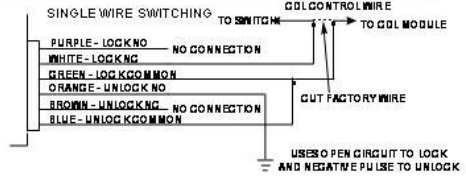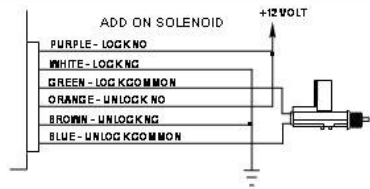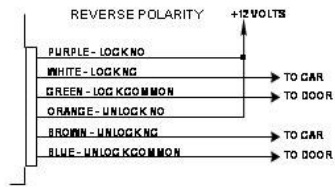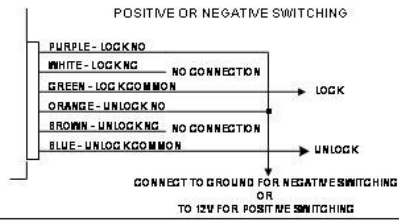

## PROGRAMME OPTIONS

1. Ensure the drivers door is open
2. Within 15 seconds of opening the door, turn the ignition ON/OFF the number of times relative to the programme chart (eg: 4 times for ignition door locking)
3. Siren will then chirp the same number of times as the programme number (eg: 4 times for ignition door locking), the lights also flash the same number of times
4. Press button one to turn the feature "ON" - siren chirps once – lights flash once
5. Press button two to turn feature "OFF" - siren chirps twice – lights flash twice
6. Leave system for 10 seconds - system fast chirps 3 times (lights flash 3 times) to signify end of programming

\* = DEFAULT

	FEATURE	BUTTON ONE (ON)	BUTTON TWO (OFF)
3	REMOTE CODE LEARNING	See page 13	
4	IGNITION DOOR LOCK	ON	OFF*
5	SIREN CHIRPS	ON	OFF
6	CDL PULSE	0.8 SEC'	3.5 Sec.
7	SIREN OR HORN	SIREN *	HORN
8	DOOR DIAGNOSTICS	ON *	OFF
9	NSW SIREN TIMING	ON	OFF *
10	LAST DOOR ARMING	ON	OFF *

## TURBO INTERFACE

To enable, remove the cover from the main module and remove the jumper J2.

# WARRANTY CONDITIONS

## PRODUCT WARRANTY

Mongoose warrants for a period of 36 months that it will make good without charge at Mongoose's discretion, by repair or replacement with a reasonable equivalent, any defect in the product providing that;

- (a) the defect has been notified as soon as it is noticed to an authorised Mongoose installation centre, distributor or agent (in the first instance to the original installation centre).
- (b) the alarm is less than 3 years of age from the date of sale and was manufactured within the last 4 years.
- (c) the alarm has been installed by an approved Mongoose installation agent
- (d) it has been installed according to the AS/NZS 3749.2 Installation Standards and/or to our written instructions.
- (e) provision of proof of purchase stating where it was purchased and by whom it was installed.
- (f) if the alarm is installed by anyone other than an approved Mongoose installer a 12 month parts only warranty applies
- (g) an authorised installation centre has determined that the defect complained of is a genuine product defect and not caused by:
  - (i) incorrect installation or any other consequential damage caused by the vehicle or other vehicle parts
  - (ii) operation of alarm after it is known to be defective
  - (iii) alteration or modification of the alarm or its components
  - (iv) the fitment of additional security parts or accessories not supplied by or approved of by Mongoose
  - (v) any work carried out on the alarm by someone other than an authorised Mongoose installation centre
  - (vi) misuse, accident, deliberate act or abuse (eg: misdirected electrical current, ingress of water or fluid, vehicle damage)

## Exclusions:

- (i) removal & refitting costs of parts
- (ii) mobile service costs
- (iii) batteries, i.e. remote controls
- (iv) normal wear and tear
- (v) alarms operated outside the original country of purchase
- (vi) freight costs of parts to rectification centres
- (vii) transport costs of getting a vehicle to a repair centre
- (viii) consequential costs of vehicle non-operation where the remote controls or PIN code card are lost, not available, or an inability to use

## INSTALLATION WARRANTY

Warranty for the installation is borne by the original installing agent only.

The period and terms of warranty are determined by the installation agent and should be verified with them.

Rectification work required to correct an installation fault carried out by anyone other than the original installation agent will incur their charges.

Authorisation to have this work carried out and agreement to have any costs refunded should be obtained from the original installation agent prior to work commencing.

Whilst every care is taken in fitting the security system, Mongoose accepts no responsibility for any damage caused to a vehicle in the installation process. Responsibility is borne by the installer.

## THIS WARRANTY IS ONLY TRANSFERABLE AS PRESCRIBED AS BELOW

- a) If the vehicle is sold together with this product, the new owner receives the balance of any warranty period remaining.
- b) If the original owner has the system re-installed into an alternative vehicle by an authorised Mongoose installation centre, the owner receives the remaining period of warranty. If re-installed by an unauthorised person, this warranty ceases.

These products are manufactured, tested and certified to the joint Australian and New Zealand Standards AS/NZS4601 1999 amendment 1 & AS/NZS3749.1 2003 Class A (M60G) or Class B (M60B, M60S).

Manufactured for: Mongoose (Australia) Pty Ltd  
Make & Model Number: Mongoose M60 Series  
Country of manufacture: Taiwan R.O.C.  
Supply voltage: 12v DC nominal – negative ground  
Current consumption: 0.3amps (see alarm module label)  
Suitability: All vehicles with 12v negative earth batteries  
Date of manufacture: Refer date code on alarm module case

AS/NZS3749.1 2003 Class A/B definition: includes control equipment including setting and un-setting facilities, all sensors, warning devices and provision for immobilisation of the vehicle.

Whilst this security system provides a deterrent, it may not prevent theft or damage through wilful criminal intent. Mongoose does not by inference, intent or any other means guarantee that a vehicle fitted with one of its security systems will not be stolen, broken into, tampered with, or parts taken. Mongoose does not offer nor will pay compensation for any loss. We recommend adequate vehicle insurance and the fitment of other security devices as deemed necessary. The loss and any associated costs of replacing the remote controls and/or PIN code card in making the vehicle mobile are the responsibility of the vehicle owner/driver.

**PROOF OF PURCHASE**  
**DO NOT LEAVE THIS INFORMATION IN THE VEHICLE**

OWNERS NAME:..... VEHICLE MAKE:.....  
ADDRESS:..... VEHICLE MODEL:.....  
..... VEHICLE REG' NO:.....  
TELEPHONE NO:..... ALARM MODEL NO:.....  
ALARM PURCHASED FROM:.....  
DATE PURCHASED:.....  
INSTALLED BY:.....  
DATE INSTALLED:.....  
INSTALLER SIGNATURE:.....  
OWNERS SIGNATURE:.....

Dealer
--------

Please complete the above details, detach from this manual and keep in a safe place. These details should be presented to your Mongoose dealer in the unlikely event that you require this product to be repaired under the terms of the 'product warranty'. Refer 'Warranty Conditions'. Failure to provide this 'Proof of Purchase' may result in rectification charges being made. If you sell the vehicle within the warranty term, please pass on this on to the new owner.